The Flagpole Company PO Box 765 221 N. Main St. Brooklyn, MI 49230 800.805.9728 www.flagpolecompany.com


> Security Access w/Handle

Below Grade


THE FLAGPOLE COMPANY.

The Flagpole Professionals!



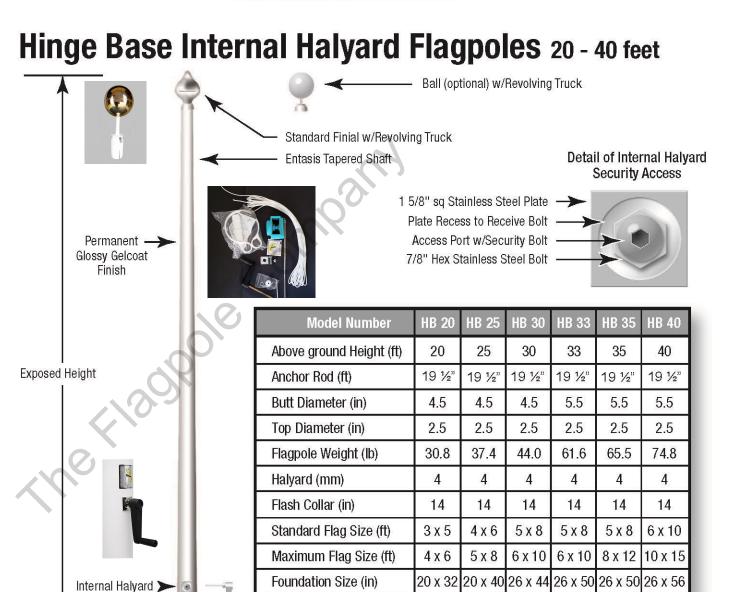

All flagpoles shipped with finial, revolving truck, halyard, hinge base kit, counter weight, crank handle, flag clips and instructions.

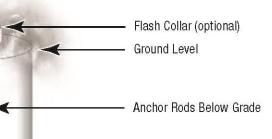





milige base besign may vary




The Flagpole Company PO Box 765 221 N. Main St. Brooklyn, MI 49230 800.805.9728 www.flagpolecompany.com



Hinge Base Schematic 20ft-40ft

Hinge Base Schematic for - 20 to 40 ft Flagpoles (new)

- Steel base and ground plate are hot dipped galvanized steel
- · Anchor rods, nuts and washers are cold galvanized steel
- · Inner steel tube bonded to fiberglass pole with fiberglass and resin-

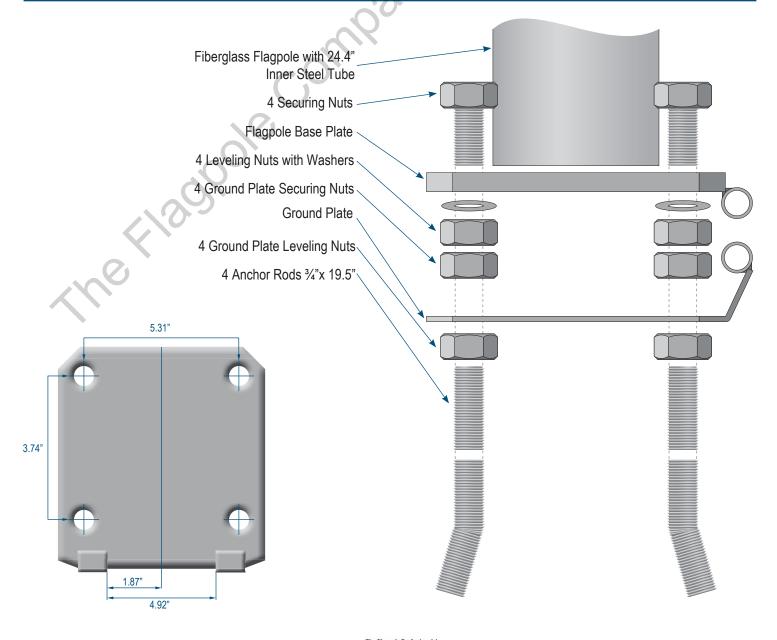




The Flagpole Company PO Box 765 221 N. Main St. Brooklyn, MI 49230 800.805.9728 www.flagpolecompany.com



Fiberglass Flagpole Tilt (Hinge) Base Installation Instructions

Tilting Base Set-up

 These instructions assume normally packed soil. In case of lightly packed, sandy, humid, or other conditions where concrete block could potentially shift, increase the hole size to create a wider base for greater stability.



Dig a hole in the ground according to measurements indicated in **Drawing A**. Position hinge part of the tilting base toward the side where the flagpole will be tilted. Ensure that enough space is available when tilting flagpole to the ground.

 


2 Secure anchor rods to plate using nuts (3) and (4). Set-up according to measurement M (see Drawing B) and install hinge plate above hole in the ground on top of a cross bar to maintain plate at proper level.



Fill hole with concrete up to a level below the lower nuts (3) and ensure correct positioning of the plate.


Drying time varies with weather and cement type. Allow one day for quick setting cement and a full week for standard cement.



Once concrete is hard, remove the crossbar, keep nuts (3), (4), and washers (6) in place. Washers (7) and nuts (5) will be used later to secure flagpoles in vertical position.

Position flagpole's base plate on hinge plate using the hinge pin (9). Lift flagpole vertically, fit washers (7) and nuts (5) on anchor rods. Check that flagpole is vertical; if not, adjust position by modifying position of nuts (3/4/5), then tighten nuts (5)

IMPORTANT: Measurement M (distance between bottom nut (3) and top of anchor rod) must be accurate to be able to raise pole completely.

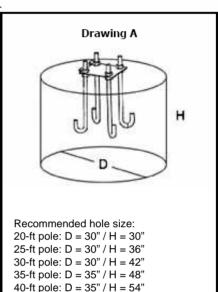

D = Hole Diameter

H = Hole Height

