

### Polaris Ranger 1000 XP 8" Dual Idler Portal Kit

Parts Available For These Popular Brands and Others



0





Kawasaki





- sales@highlifter.com
- 800-699-0947 8:00am 5:00pm CST
- 7455 Atkinson Drive, Shreveport, LA 71129



### **IMPORTANT PRODUCT USE AND SAFETY INFORMATION / WARNINGS**

This product is designed for use on ATVs and/or RUVs to lower the final drive gear ratio and increase ground clearance. Purchasers should be aware that use of this product may increase the frequency of required maintenance, part wear, and will raise the center of gravity on your ATV and/or RUV, increasing risk of roll-over, injury and death on all types of terrain. It is your responsibility to always inform other operators and passengers of this vehicle about the added risks with this product.

High Lifter's products are designed to best fit user's ATV/RUV under stock conditions. Adding, modifying, or fabricating any OEM or aftermarket parts will void warranty. High Lifter Products, products could interfere with other aftermarket accessories. If the user has aftermarket products on machine, contact High Lifter Products to verify that they will work together. Adding aftermarket suspension components and/or more aggressive tires can cause breakage of other OEM driveline components such as differentials, axles, or drive shafts.

Riders should be advised that the handling characteristics of a taller ATV and/or RUV are different and require extra care when riding, particularly on the side of hills or off-camber situations. If you further raise the center of gravity by adding taller tires, heavy loads to racks or seats, or by any other means, the ATV and/or RUV must be operated with even more care, at slower speeds and on relatively flat ground. All turns should be done at a slow speed, even on level ground.

Operation of an ATV and/or RUV with or without modified suspension components, while or shortly after consuming alcohol or drugs, subjects the rider and passengers to the risk of serious bodily harm or possible death. This risk is compounded if the riders do not wear an approved helmets and other safety gear. High Lifter urges that all approved safety gear be worn when riding an ATV and/or RUV as a driver or passenger.

By purchasing and installing High Lifter Products, products, user agrees that should damages occur, High Lifter Products will not be held responsible for loss of time, use, labor fees, replacement parts, or freight charges. High Lifter Products will not be held responsible for any direct, indirect, incidental, special, or consequential damages that result from any product purchased from High Lifter Products. The total liability of seller to user for all damages, losses, and causes of action, shall not exceed the total purchase price paid for the product that gives rise to the claim.

### **Dealers and other Installers**

You are responsible for informing your customer and end user of the information contained above and the increased potential hazards of operating an ATV and/or RUV equipped with modified suspension components. If you install any suspension modifying components, it is your responsibility to also install the warning label prominently in view of the driver and in prominent view of the driver and passenger on RUVs and multi-passenger ATVs. They should also be instructed to notify anyone operating the vehicle, as well as any passengers, that said vehicle is modified.

As discussed above, it is critically important that they be instructed in the need for slower speed operation, regardless of terrain, after this lift kit is installed.

### PRODUCT DISCLAIMER

#### THE PRODUCT IS/WILL:

- Designed and intended for use on a UTV at slow speeds.
- Increase the center of gravity.
- Increase the turning radius.
- Increase the stopping distance when adding larger tires.
- Increase and accelerate wear of factory components including bushings, bearings, ball joints, and tie rod ends.
- We cannot guarantee fitment with other aftermarket accessories.

#### **Safety Guidelines:**

- Inspect all moving factory suspension components particularly ball joints, tie rod ends, control arm connections, and brakes prior to each ride and replace if worn.
- Inspect clearances with control arms and brake lines prior to each ride.
- Wheel spacers should not be used with a Portal Gear Kit.
- 14" or larger wheels must be used with the Portal Gear Kit. 12" wheels cannot be used.
- Jumping, high speeds, and quick maneuvering should be avoided.

#### **Maintenance Information:**

- Check gear oil in portal boxes following 25 hours of riding or sooner, depending on how you ride.
- Use 4 oz of SAE 80W-90 Gear Lubricant as needed in each portal box.
- Replace worn factory components including bushings, bearings, ball joints, brakes, and tie rod ends when they show wear.

Any vehicle equipped with a Portal Gear Kit must have the enclosed large format "Warning to Driver" decal installed on the inside of the windshield or on the vehicle's dash, within driver's view. The "Warning to Driver" decal is to act as a constant safety reminder for whoever may be operating the vehicle.

#### **INSTALLING dealer:**

It is your responsibility to install the "Warning to Driver" decal and forward these installation instructions to the vehicle owner for review of warnings, product use, and maintenance information. Replacement Warning Decals are available FREE on request. These instructions are to be kept with the vehicle registration papers and owner's manual for the service life of the vehicle.

#### **REFUSED Shipments/Order CANCELLATION:**

Refused shipments are subject to a 20% restocking fee plus all associated freight costs. It is our goal to ship all orders in a timely manner. If a customer wishes to cancel an order (provided it is not a special order product), it is the responsibility of the customer to cancel the order prior to the product being shipped. If a customer cancels an order after product has been shipped, refused shipment, cancellation, or return will be subject to a 20% restocking fee and any freight charges incurred. For orders outside the United States, any fees associated with customs or duties are non-refundable.

#### **DAMAGED Shipments:**

All claims for damaged shipments must be made within 72 hours of delivery to the point of destination. Any damage to package should be noted with carrier at the time of delivery if possible. We will not be responsible for damage claims made over 72 hours after delivery to the point of destination.

PORTAL INTRODUCTION

## READ THESE INSTRUCTIONS CAREFULLY. IT IS RECOMMENDED THAT A PROFESSIONAL MECHANIC PERFORM THE INSTALLATION. CARE SHOULD BE TAKEN TO FOLLOW ALL STANDARD SAFETY PROCEDURES.

• **PRIOR** to installation, a thorough inspection of the suspension should be made. Inspect the vehicles steering, driveline, and brake systems, paying close attention to the suspension link arms and bushings, anti-sway bars and bushings, tie rod ends, ball joints and wheel bearings.

• Also check the steering sector-to-frame and all suspension-to-frame attaching points for stress cracks. The overall vehicle must be in excellent working condition. Any worn, bent or broken parts should be repaired and/or replaced.

**NOTE: DO NOT** add or fabricate any components to gain additional suspension height.

**NOTE: AFTER** installation, another inspection should take place, checking for loose components or missing hardware. Inspect, again after eight (8) hours of operation. Remember to check your lug nuts again.

**NOTE:** A factory service manual should be on hand for reference. The manual will contain fastener torque specs, assembly techniques, and special tool requirements that are unique to this

### REQUIREMENTS



## TOOLS Jack & Stands

- Metric & standard socket assortments
- Metric & standard hex key/sockets
- Impact Driver
- Torque wrench
- Multi-purpose pliers
- Wire cutter/snips
- Mallet (Soft face hammer)
- Drift punch/pin/ Blind Bearing Puller



### **SUPPLIES**

- Water-resistant grease
- DOT 4 brake fluid
- 80w90 gear oil



#### TIRE REQUIREMENTS

- Up to 34" Stock
- 37" Forward Kit 1.5"
- 38" Forward Kit and Lift Kit
- 40" Big Lift Kit



### WHEEL REQUIREMENTS

- 22" or larger wheel required
- 22" wheels cannot exceed 5" backspacing



### HARDWARE (PGLBOX-P801-B1) 73-15979



SK-VT-1 71-10912 1/4 Clear Hose (3ft)

HC812412Z 54-60832 1/2" x 4- 1/2" Bolt (24ea)

HC812434Z

1/2" x 4- 3/4"

54-60833

Bolt (8ea)

PGLC-WSTUD-104 73-14796 12mm x1.5 TP Stud (16ea)

Tunnu

**MCS520** 54-61003 M5 x .80mm x20mm Bolt (8ea)

9

WL-CLAMP-12 73-15076 1/2 Loom Camp (8ea)

 $\bigcirc$ MFW5 54-61030 **5mm Flat** Washer (16ea)

 $\odot$ **PGLC-ROTOR-SP** 73-14799 1/2 Rotor Spacer (16ea)

3/8 Lock Washer

54-60846

0

LW38Z

54-60939

(16ea)

Bolt (16ea)

HC838114Z

3/8 X 1-1/4" Hex

9 **MLN5-0.8** 54-61041 M5 x .80mm Lock Nut (8ea)

115N  $\odot$ 115N

Cotter Pin (4ea)

**CP5322Z** 73-13216

0

73-14686 Front Caliper Bracket (2ea)

**118**0 0 **1180** 73-14687

**Rear Caliper** Bracket (2ea)

131

**LOCTITE-02** 54-60936 **Red Loctite** (1ea)

- 0 79-15280 **Rear Brake Line** 14" Extension (2ea)

C. 79-15282 Front Brake Line 16" Extension

(2ea)



### FRONT BACKING PLATES (PGLBOX-P801-B2) 73-16128

PORTALS
Portal Assembly (4ea)

### REAR BACKING PLATES (PGLBOX-P801-B3) 73-16114



**73-16001-L** Left Front Portal Backing Plate (1ea)




73-16001-R Right Front Portal Backing Plate (1ea)



FRONT (50%) PGLAB-850-DI-P801 (73-15977) (60%) PGLAB-860-DI-P801 (73-15981)

REAR DRIVE GEAR REVERSED (50%) PGLAB-850-DI-P802 (73-15978) (60%) PGLAB-860-DI-P802 (73-15982)

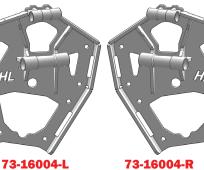

**Left Rear Portal** 

Backing Plate (1ea)

**73-16004-R** Right Rear Portal Backing Plate (1ea)

### HUB & ROTOR (PLGBOX-HRB-801) 73-15967



**PGLC-HUB-203** 73-15876 30mm Hub (4ea)



**PGLC-ROTOR-3** 73-14778 13" Rotor (4ea)



### **FRONT WHEELS**



# FRONT PASSENGER SIDE KEEP ALL FACTORY HARDWARE.

Removal

Removal

Removal

Place jack under the FRONT center of the UTV and lift until the weight is off the suspension. and lift until the weight is off the suspension. Ensure that the vehicle is properly secured by using jack stands.

Raise unit an additional 8" to accommodate portals.

Remove the front wheels.


### BRAKE CALIPER

2



Remove the caliper by removing the (2) stock mounting bolts (15mm) Remove the front mud scraper (8mm). KEEP ALL FACTORY HARDWARE.

### **HUB ASSEMBLY**

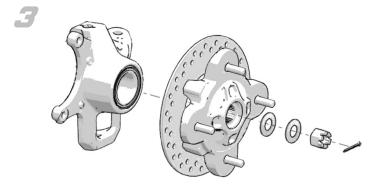


Remove the cotter pin, axle nut, and washers from the hub assembly, then remove the hub. (27mm)



### **BALL JOINTS & TIE RODS**

4

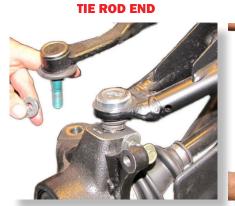

Disconnect the **tie rod** from the knuckle. (**18mm**)

**KEEP ALL FACTORY HARDWARE.** 

#### FRONT BACKING PLATE

#### **UPPER BALL JOINT**



Disconnect the **Upper ball joint** by removing the **bolt** at the knuckle. **(15mm)** 

#### **LOWER BALL JOINT**



Remove axle, then disconnect the **Lower ball joint** by removing the **nut** at the knuckle. **(18mm)** 





Insert the lower ball joint into the lower mount bracket on the backing plate. Loosely secure with factory nut.

Insert the axle into the backing plate.

Insert the **upper ball joint** into the **upper mount bracket**.


Fasten ball joints with the factory hardware. (15mm) [50 ft lbs]

Note: You may need to clean powder coating from the holes.

**BOX CAP** 




Remove the  $1/4-20 \ge 3/4$ " screws & cap/gasket from the lid of the FRONT portal box.

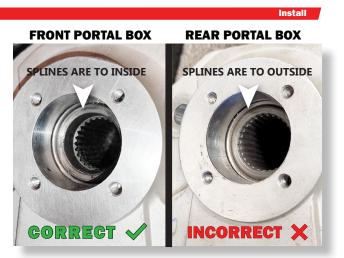

NOTE: On the FRONT portal boxes, the drive gear splines should be recessed to accommodate the shorter front drive shaft splines.

6

### FRONT CALIPER BRACKET

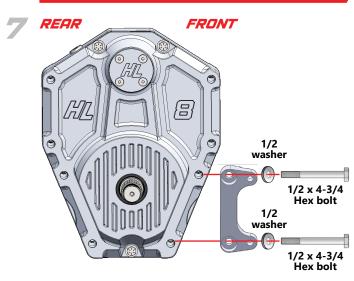


Install the **115N caliper bracket** facing the **FRONT** of the vehicle.

Install


Install

The bolt head should sit flush with the bracket.

The installment should look like the featured diagram, when complete.

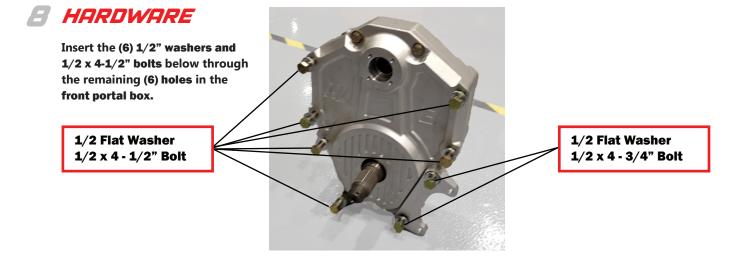

### FRONT PORTAL

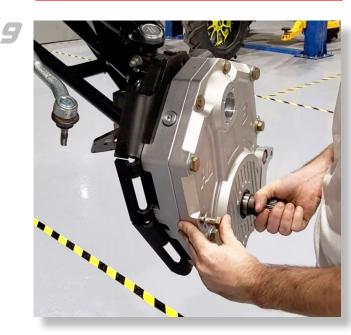

Apply water-resistant grease to the drive splines. Be sure to apply product all around the outer edge as well.

Rotate the **portal box 'Up & In'** as you guide the drive shaft axle through the inner drive gear.

### **REPEAT STEPS ON OPPOSITE SIDE**

#### **FRONT PORTAL**

10



Insert the **bolts** through the corresponding **holes in the backing plate.** 

Loosely fasten all (8) **bolts** with 1/2" flat washers and 1/2" lock nuts. Ensure parts fit correctly then torque. (3/4) [105 ft lbs]

### **TIE ROD**



### TIE ROD END

Install the tie rod end into the backing plate mount bracket. Fasten with the factory hardware. (18mm) [90 ft lbs]

NOTE: If you are using our High Lifter Big Lift or Front Forward Arms in conjunction with this portal kit, you may need to drill out the tie rod mount bracket to utilize the steering hardware you are currently using.

### **FRONT PORTAL**

Install

Install

Install






Apply LOCTITE (BLUE) to the supplied M18 axle nut with shoulder PGLC-AXNUT-4 and torque onto the drive shaft axle. (30mm) [20 ft lbs]




Align the portal box lid cap & gasket. Use the 1/4-20 x 3/4" screws to secure the cap to the portal box. [8 ft lbs]

### **ROTOR ASSEMBLY**

Locate all (4) multi pattern hubs, so they can all be assembled at the same time. They are designed to work with different bolt patterns. With the shorter lip side faced down, find the bolt pattern that corresponds to your make and model. Use the provided **studs (12mm-1.5 stud) (4/156mm bolt pattern)** 

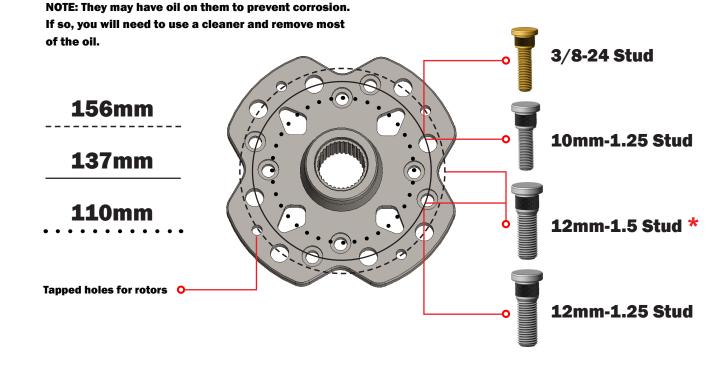

### **ROTOR ASSEMBLY**

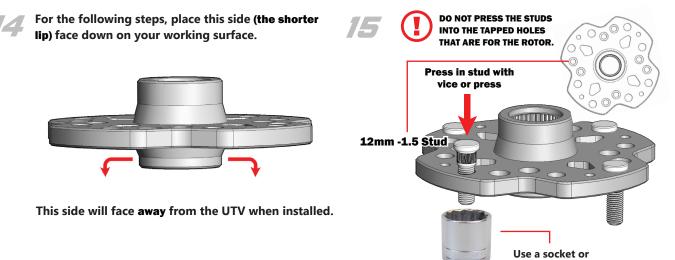


something similar to back the stud and rotor.

Install

### **ROTOR ASSEMBLY**

1/5

**Place the 1/2 spacers** over the tapped holes. These spacers go **BETWEEN** the hub and rotor.

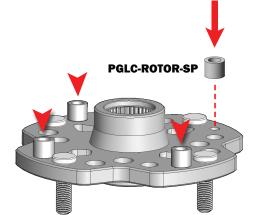


Install the rotor and secure it to the hub by applying LOCTITE (RED) to the (4) 3/8 x 1-1/4" hex head bolts & (4) 3/8 lock washer. (7/32) [45 ft lbs]

Install

Install

Removal

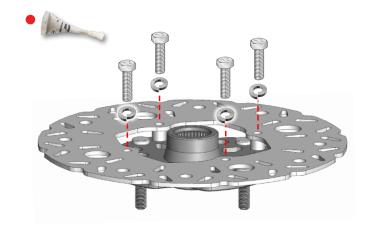


### **ROTOR & HUB**



Apply waterproof grease to the spindle splines and slide the brake rotor onto the spindle shaft. Slide on the 30mm lock washer, 30mm castle nut. (46mm) [Min 120 ft lbs]

Tighten the castle nut further if needed to align grooves with hole in the spindle for the cotter pin.

Install the cotter pin, then bend it to secure it.

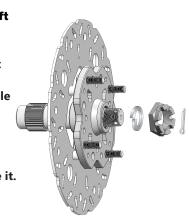

### FRONT BRAKE LINES



18




Disconnect the **stock brake line from the caliper**, if you have not done so already. Have a container ready to collect fluid.

**REPEAT STEPS ON OPPOSITE SIDE** 

### FRONT BRAKE LINE EXTENSION

### 21 STOCK BRAKE LINE TO EXTENSION INSTALL

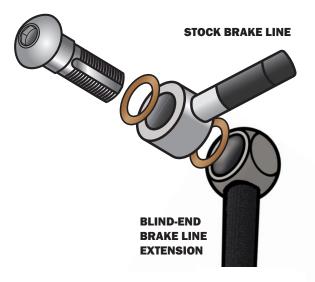



Install


Locate the propper BRAKE LINE EXTENSION. Using the supplied button head hex drive banjo bolt, connect the STOCK BRAKE LINE to the BLIND-END BRAKE LINE EXTENSION. Ensure the copper washers are on each side of the banjo fitting.

NOTE: Verify that the back of the blind hole fitting (rounded portion) is facing INWARD towards the center of the unit.

### BRAKE LINE EXTENSION

EACH UNIT HAS A SPECIFIC BRAKE LINE LENGTH AND FITTING TO THE CALIPER. THE FOLLOWING CHART DISPLAYS THE CORRECT LINE FOR THIS SPECIFIC APPLICATION.

ALL BRAKE LINE EXTENSIONS HAVE A BLIND-HOLE THAT CONNECTS TO THE STOCK LINE.

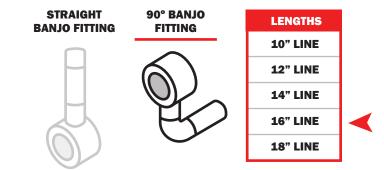

### EXTENSION TO CALIPER INSTALL

On the opposite end, connect the REQUIRED BRAKE LINE EXTENSION to the stock brake caliper. Verify there is a copper washer on each side of the banjo fitting. Position the fitting like the photo previewed.

NOTE: The fitting & length will vary depending on the make, model, and brake caliper (front vs. rear)



### **22** THIS STEP IS FOR (RNG1-3) SPECIAL EDITIONS ONLY IF YOU DO NOT HAVE A SPECIAL EDITION SKIP THIS STEP



Remove the stock hanger bracket from the caliper.



Install the supplied hanger bracket (85X) to the caliper. REINSTALL BRAKE PADS.







Install the caliper onto the portal box. Use the (2) stock bolts to secure the caliper to the bracket [30 ft lbs].

NOTE: Remember, the bleed off valve always goes to the TOP of the caliper. [30 ft lbs] torque (13mm) [15 ft lbs]


### BACKING PLATE

Secure the brake line to the FRONT of the portal backing plate by using (2) p-clamps FACING INWARD TOWARD THE CENTER OF THE UNIT.

**In**sert a **5mm x 20mm bolt** through the clamp and backing plate, followed by a **5mm washer on each side and 5mm lock nut.** 



ENSURE ALL LINES ARE SECURE AND FREE OF PINCHING OR BINDING FROM MOVING PARTS.

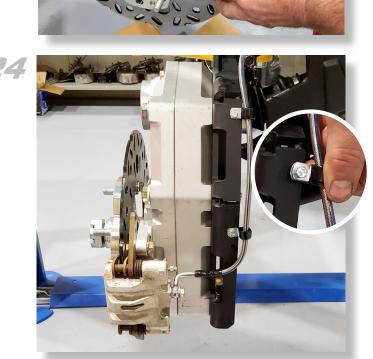

### **REAR INSTALL**

### **REAR WHEELS**

**BRAKES & HUB** 



### REAR PASSENGER SIDE

Removal

Removal

**KEEP ALL FACTORY HARDWARE.** 

Place jack under the **REAR center** of the **UTV** and lift until the weight is off the suspension. **Ensure that the vehicle is properly secured by using jack stands.** 


Raise unit an additional 8" to accommodate portals.

Remove the rear wheels.





Remove the caliper by removing the (2) stock mounting bolts from the knuckle. (15mm)

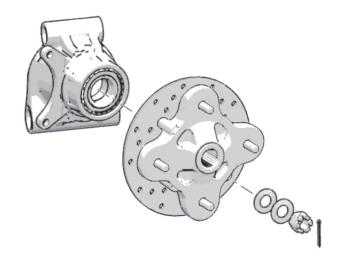

Remove the cotter pin and castle nut (27mm) on the rear axles, then remove the brake rotor assembly.


### **BUSHINGS**

IF YOU HAVE ACCESS TO A BLIND BEARING PULLER WE HIGHLY RECOMMEND USING THIS TOOL OVER USING A PUNCH. USING A PUNCH MAY CAUSE DAMAGE TO THE BUSHINGS.



Remove the bolts and nuts that attach the rear knuckle to the upper (15mm) & lower (18mm) A-arms. Retain factory hardware.

Reuse your factory **pivot caps**, **bushings**, **and sleeves**, if in good condition. Inspect components for wear. Replace as needed.

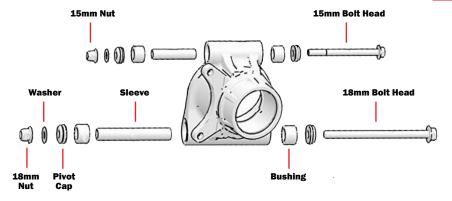



Remove **pivot caps** and **sleeves** from both arms.

Use a blind bearing puller or a flat punch to remove the bushings.


**NOTE:** Use caution when removing the bushings from the knuckle, there is a stop built in that prevents the bushing from pushing out when installed. Because of this, the bushing must be pushed out from the opposite side.


### BUSHINGS
 
### **28 REAR BACKING PLATE**

Insert the bushings, sleeves, and pivot caps into the collars of the rear right backing plate

**NOTE:** We recommend applying quality water-resistant grease to the bushings, especially inside the pivot collar and along the sleeve.

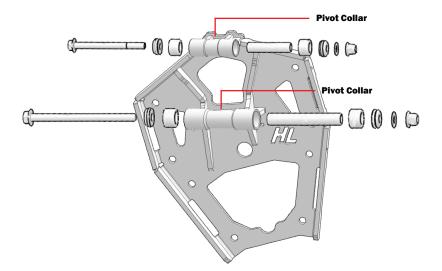



NOTE: You will need a press or vice and a socket of similar diameter as the bushings to press them into place.

> NEED REPLACEMENT BUSHINGS?



Install

### **REAR INSTALL**

### BOX CAP

29




Remove the 1/4-20 x 3/4" screws, cap, and gasket from the lid of the assembled portal box.

### FRONT PORTAL BOX

### **REAR PORTAL BOX**

Install

Install

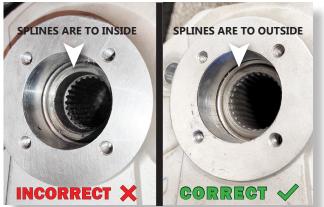


NOTE: On the REAR portal boxes, the drive gear is reversed, and the splines should be to the outside edge to accommodate the longer rear drive shaft splines.


### **REAR CALIPER BRACKET**

**30** Install the **1180 caliper bracket** facing the **REAR** of the vehicle.

The bolt head should sit flush with the bracket.

The installment should look like the featured diagram, when complete.

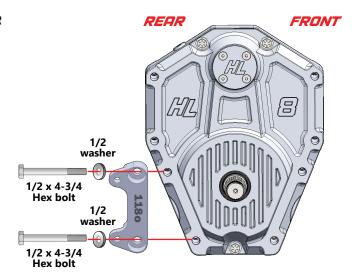

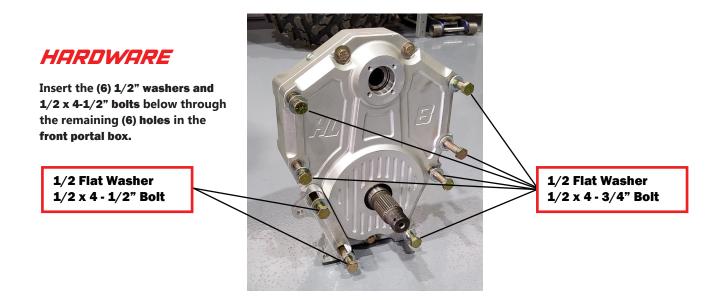

### **REPEAT STEPS ON OPPOSITE SIDE**

### **REAR INSTALL**

#### **REAR PORTAL ASSEMBLY**



Apply water-resistant grease to the drive splines. Be sure to apply product all around the outer edge as well.


Install

Install

**Rotate the portal box 'Up & In'** as you guide the drive shaft axle through the inner drive gear.

**Insert the bolts** through the corresponding holes in the backing plate.



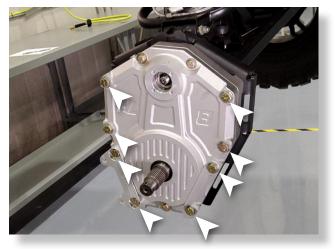

Loosely fasten all (8) bolts with 1/2" flat washers and 1/2" lock nuts. Ensure parts fit correctly then torque. (3/4) [105 ft lbs]

### **REAR AXLE NUT**



With the portal box installed, apply LOCTITE (BLUE) to the supplied M18 axle nut PGLC-AXNUT-2 and torque onto the drive shaft axle. (30mm) [20 ft lbs]



Align the portal box lid cap & gasket. Use the 1/4-20 x 3/4" screws to secure the cap to the portal box. [8 ft lbs]

### **ROTOR ASSEMBLY**

Install

33

34

### IF YOU HAVE NOT ALREADY ASSEMBLED THE HUB TO THE ROTOR, REFER TO STEPS 13-17 FOR DETAILS.



Apply waterproof grease to the spindle splines and slide the brake rotor assembly onto the spindle shaft.


Slide on the 30mm lock washer, 30mm castle nut. (46mm) [Min 120 ft lbs] Tighten the castle nut further if needed to align grooves with hole in the spindle for the cotter pin. Install the cotter pin, then bend it to secure it.



### **BRAKE CALIPER**



Disconnect the **rear factory brake lines** from the **calipers. Have a container ready to collect brake fluid.** 

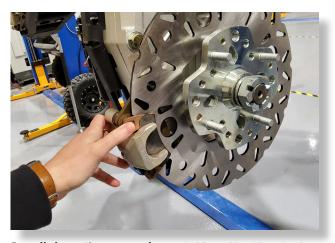


Install the caliper onto the portal box. Use the stock bolts to secure the caliper to the bracket [30 ft lbs].

NOTE: Remember, the bleed off valve always goes to the TOP of the caliper. [30 ft lbs] torque (13mm) [15 ft lbs]

### **REAR INSTALL**

### **REAR BRAKE LINE EXTENSION**

### 35 STOCK BRAKE LINE TO EXTENSION INSTALL

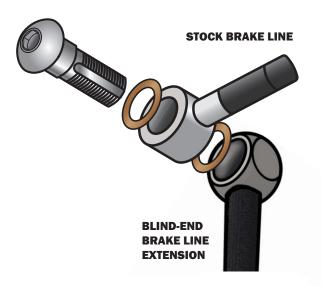




Locate the propper BRAKE LINE EXTENSION. Using the supplied button head hex drive banjo bolt, connect the STOCK BRAKE LINE to the BLIND-END BRAKE LINE EXTENSION. Ensure the copper washers are on each side of the banjo fitting.

NOTE: Verify that the back of the blind hole fitting (rounded portion) is facing INWARD towards the center of the unit.

### BRAKE LINE EXTENSION

EACH UNIT HAS A SPECIFIC BRAKE LINE LENGTH AND FITTING TO THE CALIPER. THE FOLLOWING CHART DISPLAYS THE CORRECT LINE FOR THIS SPECIFIC APPLICATION.

ALL BRAKE LINE EXTENSIONS HAVE A BLIND-HOLE THAT CONNECTS TO THE STOCK LINE.

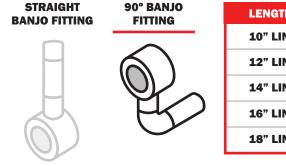

LENGTHS 10" LINE 12" LINE 14" LINE 16" LINE 18" LINE

Install

### EXTENSION TO CALIPER INSTALL

On the opposite end, connect the REQUIRED BRAKE LINE EXTENSION to the stock brake caliper. Verify there is a copper washer on each side of the banjo fitting. Position the fitting like the photo previewed.

NOTE: The fitting & length will vary depending on the make, model, and brake caliper (front vs. rear)



### **BRAKE LINES**



### BACKING PLATE

Secure the brake line to the FRONT of the portal backing plate by using a p-clamp FACING INWARD TOWARD THE CENTER OF THE UNIT.

**In**sert a **5mm x 20mm bolt** through the clamp and backing plate, followed by a **5mm washer on each side and 5mm lock nut.** 





### FINAL INSPECTION

NOTE: ENSURE THAT THERE IS NO BINDING, PINCHING, OR INTERFERENCE WITH MOVING PARTS OR SHARP EDGES AND THE BRAKE LINES.

### **VINITIE: USE DOT 4 BRAKE FLUID**



CAUTION: ALWAYS wear eye protection like safety glasses. Brake fluid will damage finished surfaces. Do not allow brake fluid to come in contact with finished surfaces.

- Bleeding the brakes is a two person job; you will need someone at the brake caliper and someone to pump the brake foot pedal. Take precautions due to the vehicle being on jacks and/or jack stands.
- 2. Clean the master cylinder cover thoroughly and remove the cover.
- 3. With all bleeder screws open, a gravity bleed is recommended to start with. This will push all the air out at once and eliminate most of the air bubbles. (Have area prepared for spills and cleaning)
- 4. Add brake fluid to the indicated MAX level of the reservoir. (Any DOT 4 Brake Fluid)
- 5. Close off each line once you steadily see fluid coming out.
- 6. Begin final bleeding procedure with the caliper that is the farthest from the master cylinder. It should be this sequence (PA) REAR, (DR) REAR, (PA) FRONT, and then (DR) FRONT.
- 7. You can use the supplied clear hose to attach to the caliper bleeder screw. Be sure the hose fits tightly on fitting. Now place the other end of the hose into a clean container.
- 8. Install a box end wrench on the caliper bleeder screw. Have your brake buddy slowly pump the foot pedal until pressure builds and holds. Have your buddy hold brake pedal down to maintain pedal pressure. Now slowly open the caliper bleeder screw 1/4" turn so the air and fluid will displace into the container.
- 9. Close bleeder screw, and then have your buddy release the foot pedal.


NOTE: Do not release foot pedal before the bleeder screw is tight or air may be drawn into the master cylinder... and you have to start all over again!

- **10.** Repeat steps until clean fluid appears in the bleeder hose & all the air has been purged... Close bleeder screw, pump brakes, hold pressure, open bleeder, close bleeder, release foot pedal, check master cylinder.
- **11.** Check the master cylinder fluid level. **NOTE:** You must maintain at least 1/2" (1.27cm) of brake fluid in the reservoir to prevent air from entering the master cylinder.
- **12.** Tighten bleeder screw securely and remove bleeder hose. Torque the bleeder screw. [4 ft lbs]
- **13. REPEAT** procedure steps for the other three (3) brake calipers in the sequence listed above.
- **14.** Add brake fluid to MAX level inside master cylinder reservoir after the last caliper is completed. Install master cylinder reservoir cover. Check brake system for leaks.
- **15.** Once completed, dispose of used fluid properly.





DO NOT USE AN IMPACT TOOL ON ANY PLUGS.

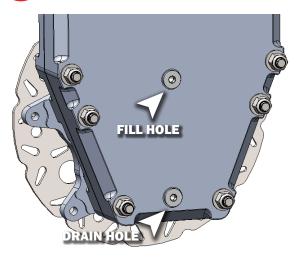

**Use SAE 80W-90 oil.** This gear lubricant is designed for gears operating under severe temperature and load conditions. **SAE 80W-90** viscosity grade offers extended performance.

### WHEEL INSTALL

#### **Wheel Requirements:**

- 22" or larger wheel required
- 22" and larger wheels cannot exceed 5" backspacing

#### **Tire Requirements:**


- Up to 34" Stock
- 37" Forward Kit 1.5"
- 38" Forward Kit and Lift Kit
- 40" Big Lift Kit
- Install wheel lug nuts and securely tighten.
- Remove all jacks, jack stands, and other devices used to lift and hold the vehicle.
- With the suspension supporting vehicle weight, torque the wheel lug nuts using an "X" tightening pattern.

ALL PLUGS MUST BE LUBRICATED OR WRAPPED IN TEFLON TAPE. PLUGS MAY NOT SIT FLUSH. DO NOT TIGHTEN TO MORE THAN 10FT LBS OF TORQUE.

- **1.** Ensure the vehicle is positioned securely and 'Level'.
- On the bottom of the box is the drain hole and plug. Make sure the plug is wrapped in Teflon tape or lubricated with oil or grease. Tighten to [10 ft lbs] (8mm)
- 3. On the lower backside of the backing plate is an opening for the portal box fill hole and plug. Remove the fill plug. (8mm)
- **4.** Place the gear oil bottle spout into the **fill hole**. You can gently 'Squeeze' the bottle to help the process.
- Fill the portal box until the fluid starts draining back out of the fill hole. Then reinstall the fill plug, wrap the threads with Teflon tape or lubricate threads with oil or grease. [10 ft lbs] (8mm)

CAUTION: Do not over fill past the fill plug. If the oil heats up or expands, it will cause the oil to exhaust out the axle seal.

6. On the top of the box is the vent hole and plug. Using an Allen wrench, make sure the plug is tightened. [10 ft lbs] (8mm)

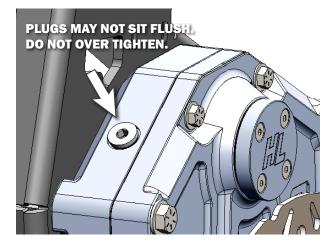

An optional vent line kit will be available in the future.

Aluminum wheels = [90 ft lbs] Steel wheels = [50 ft lbs]

WARNING: Re-tighten lug nuts at eight (8) hours after any wheel change or anytime wheel nuts are loosened. Failure to do so could cause wheels to come off while the vehicle is in motion. This is a warning and reminder. REMEMBER: You just bled the brakes, unbolted and bolted steering and drive train components, added more takeoff torque and made many changes by adding the portal boxes. FIELD TEST this machine at LOW speed before putting into full time Play or Work Mode. Check the brakes for proper braking action & pedal reserve.

#### **FRONT WHEEL ALIGNMENT**

### IF YOU HAVE ADJUSTBLE CONTROL ARMS, YOU MUST ADJUST THE CAMBER FIRST BEFORE PROCEEDING. DO NOT INSTALL WHEELS ONTO UTV UNTIL PROPER ALIGNMENT HAS BEEN ACHIEVED.

- Straighten steering wheel
- Make sure that the brake rotors are straight to sight or level.
- Using a tape measure, measure from inside to inside on the front and back ends of the rotors.



### INCORRECT TOE

 
If the toe alignment is incorrect, measure the distance between vehicle center and the back of the rotors. This will indicate which tie rod needs adjustment.

### ADJUSTING TOE

Adjust tie rods until BOTH measurements are the SAME, then adjust toe tolerance.

The recommended vehicle toe tolerance is 1/8" to 1/4" (3.175-6.35mm) toe out. This means the FRONT MEASUREMENT IS WIDER THAN THE REAR MEASUREMENT.

### TOE ADJUSTMENT CHART



**TOE IN** 

**Recommended Settings** 



If the FRONT OF THE WHEELS are facing OUT, adjust the tie rods OUT or INCREASE the length of the tie rod.

Measurement at the **front of the tires** will be **GREATER** than the rear, if the **TOE IS OUT.** 



If the FRONT OF THE WHEELS are facing IN, adjust the tie rods IN or <u>REDUCE the length of the tie rod.</u>

Measurement at the **front of the tires** will be **LESS** than the rear, if the **TOE IS IN**.

IMPORTANT NOTE: When tightening the tie rod jam nuts, the tie rod ends must be held parallel to prevent rod end damage and premature wear. Damage may not be immediately apparent if done incorrectly.

After alignment is complete, tighten & torque tie rod end jam nuts to specifications. [12-14 ft lbs]





### HIGH LIFTER LIMITED LIFETIME WARRANTY

High Lifter offers a Limited Lifetime Warranty to the original purchaser that our product shall be free from defects in material and workmanship for the life of the product if utilized in accordance with the manufacturer's instructions for installation and operation of said products.

### LIMITED LIFETIME WARRANTY EXTENDS TO THE FOLLOWING PRODUCT LINES:

- Lift Kits (Signature, Standard and Big Lifts)
- Control Arms
- Trailing Arms
- Radiator Relocation Kits

- Portal Gear Lifts
- Wheel Spacers
- Tow Hooks
- Control Arm Link Kits

Damages to vehicle or any other object during the installation, use, or removal of High Lifter products are not covered under this warranty. Normal wear items included with any of the products covered under this Limited Lifetime Warranty are excluded from coverage. These items include, but are not limited to heim joints, tie rods, bearings, bushings, seals, gaskets, zinc plating, painted and powder coated finishes. Other exclusions of coverage under this warranty include, but are not limited to: damage or product failure due to improper installation, lack of maintenance, product modification, abuse, collision or use on vehicles for which product was not designed, repairs performed by anyone other than approved High Lifter personnel or made using non-High Lifter components. This warranty is valid for the original purchaser only and is non-transferable. High Lifter reserves the right to inspect any product before determining if the claim is valid and covered under this warranty. Claims determined to be caused by reasons other than a manufacturer defect will be rejected and an estimate for repair or cost of a replacement product if a repair is not possible, will be provided.

This warranty is exclusive and is in lieu of any implied warranty of merchantability, fitness for a particular purpose or other warranty of quality, whether express or implied, except the warranty of title.

### WARRANTY PROCESSING

If you suspect your product is defective, **DO NOT** disassemble the product to determine the cause without prior approval as it may void your warranty status. This is especially true with our Portal Gear Lift. To begin the claim process, please e-mail our warranty team at warrantycare@highlifter.com and include the following in the e-mail:

- **Your full name, address and contact phone number.**
- The year, make and model of your vehicle
- **The part number of the product**
- D Photos of the product installed, and vehicle product is installed on
- **Proof of Purchase (Required for all warranty claims and you must be the original purchaser)**

Once a claim is created, you will receive a return authorization number (RMA). Write this number on the outside of the box containing your defective product and include it along with your name and contact information inside the box. Product must be returned in the original box or a box of equal strength and packaging. Product sent without an RMA number visible on the outside of the box or sent COD will be refused. Ship your product to the following address:

### **High Lifter Products, Inc.**

### Attn: Returns 7455 Atkinson Drive, Shreveport LA 71129

Once your product is received, we often have your replacement or repaired product shipped back to you within 3-business days of receiving it. Please note that High Lifter is not responsible for shipping charges on product returned for warranty or repair, including duties and fees required by those residing outside the United States.





Thank you for purchasing a High Lifter Products Portal Gear Lift. Our Portal Gear Lifts have been engineered to provide superior performance on your ATV/UTV.

#### LIMITED LIFETIME WARRANTY:

**HIGH LIFTER PRODUCTS, INC.** warrants to the **ORIGINAL** purchaser of any Portal Gear Kit for a lifetime of protection from the date of purchase against defects in materials or workmanship, subject to the following conditions:

a) The product must be properly installed according to all installation instructions.

b) **HIGH LIFTER** is not liable for any incidental or consequential damages to anything other than the Portal Gear Kit covered by this warranty. **HIGH LIFTER** is not liable for any incurred expenses, labor costs to install/remove/reinstall

Portal Gear Kit or any OEM or aftermarket components, loss of use of machine, damage to housings or damage to any aftermarket accessory or OEM components.

c) If the Portal Gear Kit has been disassembled or modified by a third party, the warranty is null and void.

d) Any Portal Gear Kit damaged in a collision with any object is excluded from this warranty. However, the Portal Gear Kit may be refurbished for a fee upon repair authorization by the owner. Costs will vary depending on the condition of each Portal Gear Kit assembly.

e) Warranty is non-transferable from the ORIGINAL purchaser.

f) **HIGH LIFTER** reserves the right to inspect the Portal Gear Kit for determining if there were any defects in the installation and to determine the validity of any warranty claim. The warranty process may require the **ORIGINAL** purchaser to provide photographs of the ATV/UTV and its installed Portal Gear Kit.

g) Items that will not be covered under the warranty are but not limited to: Bearings, Seals, Gaskets, and Wheel Studs. All other components in kit are subject to review by **HIGH LIFTER** to determine reason for failure and if they meet requirements for warranty coverage.

h) Warranty will be void on products that show; misapplication, improper installation, abuse, lack of proper maintenance, negligence, or alteration from original design.

i) Any parts used to repair a portal kit must be purchased from **HIGH LIFTER** or warranty will be voided. For safety reasons it is important that the proper fastener grade, thread engagement, and torque specification be followed to prevent parts from failing. See instructions for torque data/specifications.

#### **REFUSED SHIPMENTS/ORDER CANCELLATION:**

Refused shipments are subject to a 20% restocking fee plus all associated freight costs. It is our goal to ship all orders in a timely manner. If a customer wishes to cancel an order (provided it is not a special-order product), it is the responsibility of the customer to cancel the order prior to the product being shipped. If a customer cancels an order after product has been shipped, they refused shipment, cancellation, or return will be subject to a 20% restocking fee and any freight charges incurred. For orders outside the United States, any fees associated with customs or duties are non-refundable.

#### **DAMAGED SHIPMENTS:**

All claims for damaged shipments must be made within 72 hours of delivery to the point of destination. Any damage to package should be noted with carrier at the time of delivery if possible. We will not be responsible for damage claims made over 72 hours after delivery to the point of destination.

#### **OBTAINING A WARRANTY CLAIM:**

All returns for warranty must be pre-approved by calling 1.800.699.0947. After warranty approval has been granted and a Return Merchandise Approval (RMA) number issued, the Portal Gear Kit must be received by HIGH LIFTER PRODUCTS within 15 calendar days. The RMA number must be clearly displayed on the return box or the return will be refused. An RMA number does not imply that a replacement or refund will be issued on any product, but only that we will inspect the Portal Gear Kit for warranty claims. For orders outside the United States, any freight or fees associated with customs and duties are the responsibility of the purchaser and are non-refundable. All claims must be accompanied by the sales receipt detailing date and place of purchase, a written explanation of the problem, a phone number, and e-mail address. A copy of this receipt must be included with the Portal Gear Kit submitted for warranty repair or replacement. The purchaser is responsible for any freight charges on all warranty claims, including incoming freight to High Lifter and return freight to the purchaser.

RMA Number #	HIGH LIFTER PRODUCTS WARRANTY CLAIM
Name:	Product Number:
Address:	Place of Purchase:
	Date of Purchase:
Phone Number:	Reason for Return:
E-Mail Address:	