


THE ORIGINAL MOPAR DIRECT CONNECTION WAREHOUSE



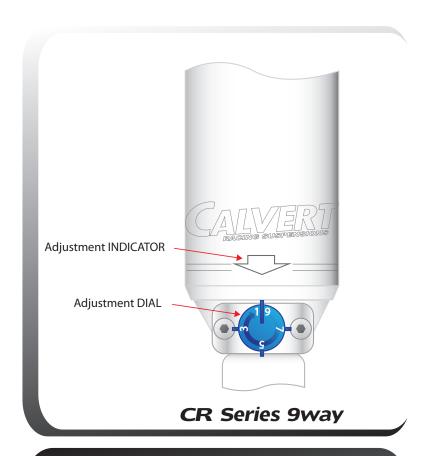

Thank you for purchasing Calvert Racing's CR Series line of adjustable rear shocks!

Adjusting your CR Series Shocks

Understanding adjustments

- 1. Begin adjusting your shocks by turning the "adjustment dial" fully counter clockwise until they reach the 1/9 setting on the indicator. This is setting #1.
- 2. Turn the dial clockwise until you achieve designated adjustment.
- 3. The firmest setting is one revolution from softest setting.





Fine tuning your CR Series Shocks

Tips

Ph: 661.728.9600

Street Driving - Adjust your CR shocks to fit your preference, usually gives you best comfort between settings 2-5.

Foot Brake (RACE) - Firmer settings are typical, usually between 6-9. Trans Brake (RACE) - Softer settings are typical, usually between 1-3

*The provided tips are provided for a starting baseline, experimentation is always encouraged to get the most performance out of our shocks.



4530 Runway Drive Lancaster, CA 93536

www.calvertracing.com