


BRP Can-Am / Outlander G2

No.: 2444.7243.1 Rear bumper
Brend: BRP Can-Am
Model: Outlander G2
Year: 2012-
Material: Tube 38x1,5 mm



Content

1. Bumper.....	1 pc.
2. Bracket.....	1 pc.
3. Bracket.....	1 pc.
4. Bolt M8x25.....	4 pc.
5. Bolt M6x20.....	6 pc.
6. Nut M6.....	4 pc.
7. Washer 6.....	10 pc.
8. Washer 8.....	4 pc.
9. Spring washer 6.....	4 pc.
10. Spring washer 8.....	4 pc.
11. Plastic plug.....	2 pc.

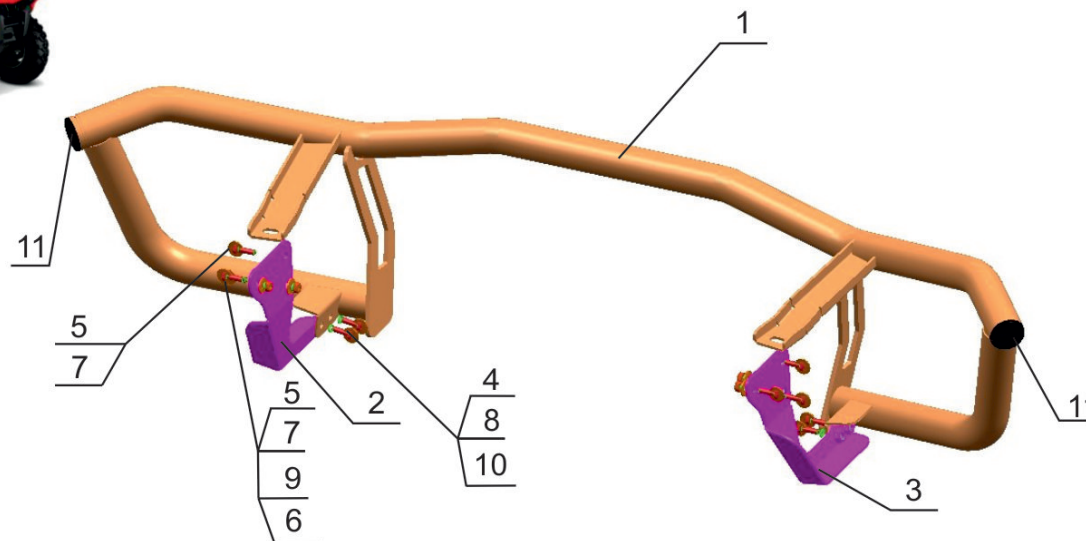

Installation Instructions

1. Mount the brackets no.2, 3 to original holes of the frame on the rear part of ATV using bolts no.5, washers no.7, 9, nuts M6 no.6.
2. Place the bumper on the rear part of ATV. Fix upper part of the bumper to fixing points of rear rack to the ATV's frame.
3. Fix lower part of the bumper to mounted brackets using bolts no.4 and washers no.8, 10.
4. Tighten all screws.
5. Install plastic plugs no.11

TOOLS REQUIRED



TOOLS REQUIRED

