



www.mud-busters.com

Email us for digital instructions: Mudbusters@gracemfg.com

Thank you for purchasing MudBuster's **fender flares for the 2015-2018 Yamaha Wolverine models!** We manufacture the best-selling fender flare kits for UTVs and side by sides! All MudBusters products are made in the USA, and these fender flares are manufactured from high-quality American made material. Your new extended fenders are designed to deflect debris and reduce the amount of mud that typically gets thrown from the tires into unwanted areas. They can withstand a lot of abuse, but they are not designed for crash protection, absorbing impacts, rollovers, or uprooting trees. If you have an accident or if you happen to damage your fenders, order discounted replacement fenders by phone (for existing customers only). Unlike other manufacturers, you do not have to buy a complete set if you damage just one fender.

IMPORTANT:

Some of the images in the instructions below may differ from the actual product. In our continual effort to increase customer satisfaction, we may change the style, material, and/or hardware to serve you better. If your fenders get slightly distorted while in transit, apply pressure to the distorted areas to straighten them out before installation.

Use caution when drilling into the factory panels of your vehicle. Make sure that you do not penetrate the surrounding parts or the chassis (unless instructed). Self-tapping screws and push rivets are included as an effective and easy way to fasten the fender flares to your machine. However, you can use other methods of securing our extended fenders to your vehicle as well (i.e., rivets, misc. hardware, etc.). Remember, it may be helpful to have a friend assist you with the installation.

Unboxing:

Carefully open your package from the box's top (or bottom) by removing the staples with a flat-head screwdriver or pliers. Slide the fenders out of the box and make sure that any staples do not scratch your fenders. MudBusters are formed to fit your machine but shipped in a narrow box. You may find it necessary to apply pressure and re-bend some of your fenders for a better fit. Don't worry, they're very durable and will not break from re-shaping them!

Note: Using a larger drill bit may allow the fender to come off when riding! The rivets need to be a tight fit to secure the fender flare to the fender. We recommend a 21/64" drill bit.

Note: Max coverage set shown. Smaller sets (Mud-Lite, or Race-Lite) may have less hardware in the front of the front fender or the lower front of the rear fender than pictured. In these cases, it may be helpful to use the rear mounting locations first for installation ease.

Thank you for your business!

Please send us pictures and/or videos of your vehicle with MudBusters installed to our Facebook page
<https://www.facebook.com/UTVMudbusters/>
#utvmudbusters.com

or email us via mudbusters@gracemfg.com

We may feature your ride on our website, social media, Amazon and/or eBay!

For technical assistance or product inquiries, please call us at:
1-844-MUD-FLAPS or 844-683-3527
Hours: Mon-Fri 8-4 MST

▲ WARNING

This product can expose you to chemicals, including phthalates which are known to the State of California to cause cancer or birth defects or other reproductive harm. For more info, go to www.p65Warnings.ca.gov

Installation Instructions

Yamaha Wolverine

Front Fender Flare Installation



1. Remove the factory bolts located on the inner front fender well.
2. Place the fender flare against the inside of the factory front fender (See [figure 1](#))
3. Have a friend hold the fender extension against the factory fender and insert (1) bolt, (1) spacer (on the backside of the fender extension), and a washer in the upper and lower holes (see [figure 2](#)). Do not tighten these bolts down yet.



Figure 1

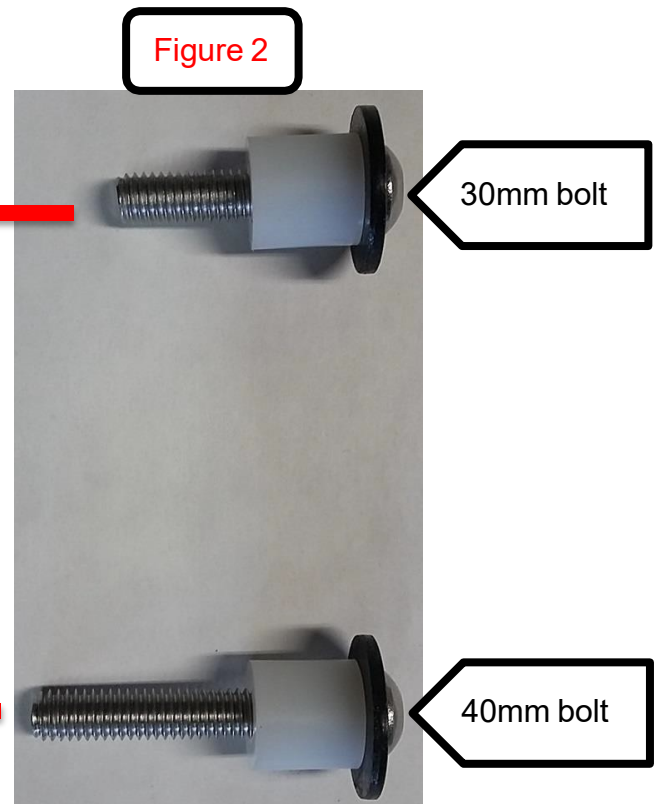


Figure 2

30mm bolt

40mm bolt

Installation Instructions

Yamaha Wolverine

Front Fender Flare Installation




4. Push the fender extension upward so that it fits tight against the upper fender. Once into position, you can tighten down the lower bolts to hold the fender in place.*

*If you have any gaps after tightening the hardware, self-tapping screws can be added to the inner fender well to secure the fender extension against the body.



5. Push the forward portion of the front fender extension up so it is tight against the body. Once in position, mark the position of the bolt hole, and drill a hole using a 1/4" bit

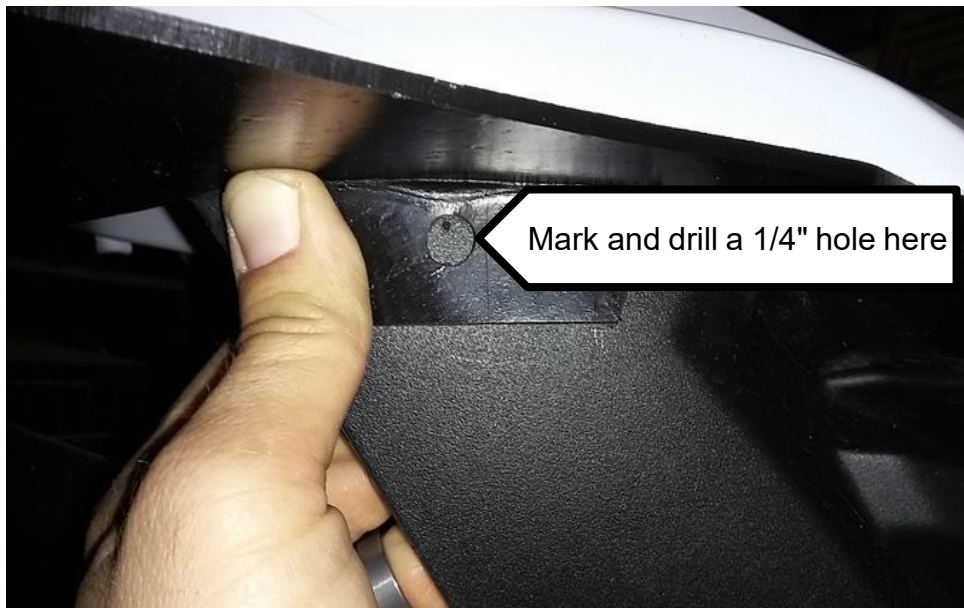

Installation Instructions

Yamaha Wolverine

Front Fender Flare Installation

6. Insert (1) 3/4" bolt with (2) washers (front & back) with a lock-nut on the backside to secure the fender.



Installation Instructions

Yamaha Wolverine

Rear Fender Flare Installation



1. Remove the factory bolts in the inner rear fender well.
2. Place the fender extension against the factory mounting points



3. Add (1) 40mm bolt, a washer, and a spacer (on the backside) into the upper bolt hole.



4. Add (1) 30mm bolt and a washer into the lower bolt hole.
5. Finger tighten the two bolts so you can adjust the fender during the next few steps.

Rear
Tire


Installation Instructions

Yamaha Wolverine

Rear Fender Flare Installation



6. Proceed to the rear of corner of the vehicle.
7. With the fender extension tucked neatly into the bends of the factory fender, hold the L-Bracket against the outside of the body (in relation to the inner hole on the fender extension, and mark the upper hole in the L- Bracket.

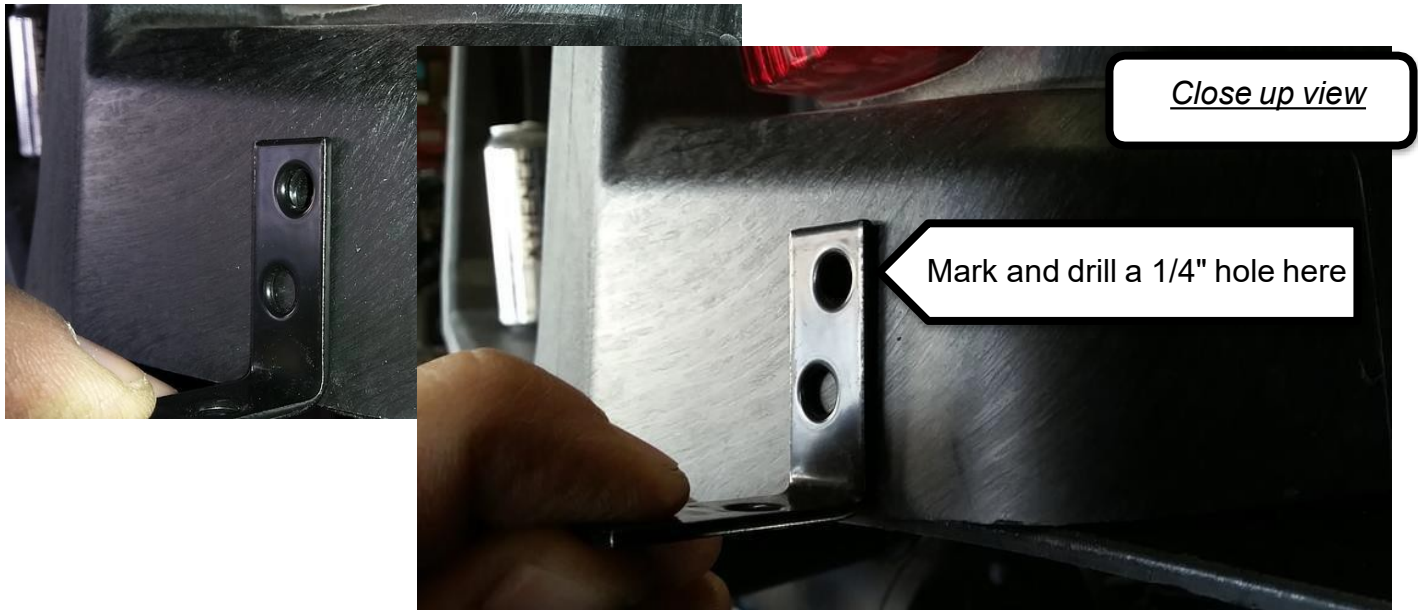

8. Add (2) 3/4" bolts with washers into each hole, through the L-Bracket on the backside, and secure the bolts with lock-nuts.*

***You may need a 7/16 socket and/or a box end wrench to secure the lock-nuts on the backside**




Installation Instructions

Yamaha Wolverine

Rear Fender Flare Installation



9. Proceed to middle of the rear fender extension.
10. Push the middle tabs upward to seal the fender extension against the outside wheel well. (See figure 3)
11. Mark and drill a 1/4" hole in each tab

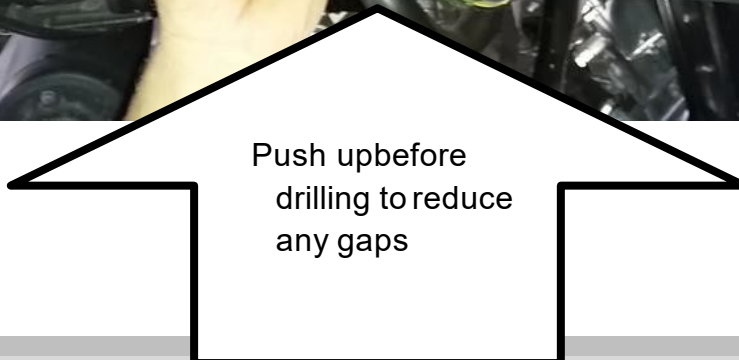

Installation Instructions

Yamaha Wolverine


Rear Fender Flare Installation



View from inside the bed



12) Insert (2) 1" bolts with a washer on both sides and secure the fender extension to the body with a lock-nut on the inside of the fenderwell.

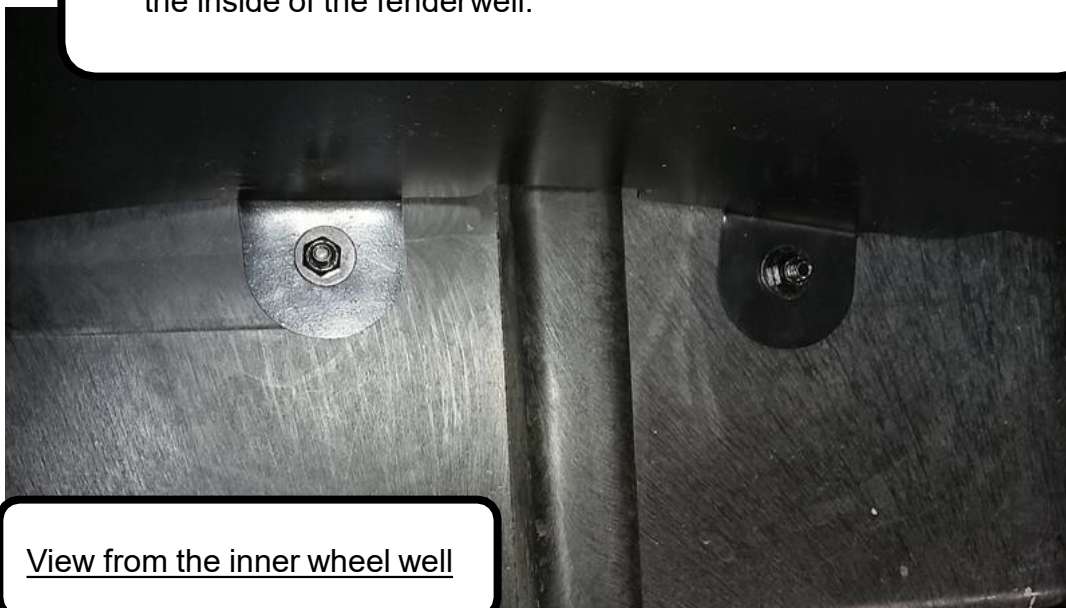

View from the inner wheel well

*If you have any gaps after tightening the hardware, self-tapping screws can be added to the inner fender well to secure the fender extension against the body.

Installation Instructions
Yamaha Wolverine
Hardware List



Hardware Included

- | | |
|--------------------------|-------------------------------------|
| (2) Front Fender Flares | (4) M6x30mm bolts |
| (2) Rear Fender Flares | (4) M6x40mm bolts (14) Locknuts |
| (20) Self tapping screws | (6) 1/2" Nylon Spacers (28) Washers |
| (10) 1/4" X 3/4" Bolts | (4) 1.5" L-Brackets |
| (4) 1/4" X 1" Bolts | |