



## FALCON RIDGE

2515 Bypass Rd. Flemingsburg, KY 41041  
606-845-7439

**Instructions for Installation and Care of**  
**Kawasaki 4010 Trans**  
**Full Cab Enclosurefits Lexan Windshield**  
KAW-4010TRANS-FC05

**CAUTION: Do not smoke inside the cab or expose the enclosure to direct flames. Product is FLAMMABLE.**

Be sure to read these instructions thoroughly before opening and installing the enclosure. The installation is best done when the temperature is 70°F or warmer. If installed outside and in the cold weather, warming the adhesive Velcro strips inside just before installation is recommended.

1. Carefully open the carton and remove the rolled up cab enclosure on a large flat surface that is clean and free of dirt or other material that may soil the cab, or scratch the clear vinyl windows.
2. Check over the parts included in the carton with the parts list shown below:

2" Velcro hook strips	22 each	3" long
" " " "	1 each	43" long
" " " "	1 each	55" long
1" Velcro hook strips	2 each	11" long
Screw snaps	11 each (1 extra)	
Cab enclosure	1 each	
3. Open up the enclosure; it will be in 4 separate pieces when removed from the packaging. With the help of another person drape the top of the enclosure over the top of the roll cage and arrange into the correct position.
4. Working your way to the rear of the roll cage, fit the enclosure into position. Wrap the bars with the 6" adhesive hook strips directly above the air intake vents on both sides of the roll cage frame. Firmly grasp the rear corners of the windshield/top and pull them down to the Velcro; wrap the double-sided Velcro strips around the hook strips you previously applied to the roll cage tube.
5. At this point get help from a friend; with both of you pulling down on both sides of the front of the enclosure(the long strip portions), use a crayon or similar non-permanent marker to mark the locations of the Velcro tab sewn to the bottom of the front enclosure strips onto the frame tubes. Apply a 5" adhesive strip onto the roll cage tubes on both sides of the frame, lengthwise on the inside of the tubes at the bottom just above the attachment brackets and facing each other. Attach the corresponding Velcro tab at the bottoms of the front enclosure strips to the hook strips previously applied to the insides of the bottoms of the frame tubes. Now apply the 4" adhesive hook strips to the insides of

the roll cage tubes at the next Velcro tab up, in the same manner as you did with the 5" strips. Repeat this step with another 5" tab at the top. Attach the rest of the Velcro tabs to the hook strips on the frame tubes. Locate the double-sided Velcro straps at the front of the enclosure, and wrap the tubes on both sides with 6" strips. Attach the corresponding double-sided Velcro straps. Finally locate the double-sided Velcro straps at the center roll cage tube but do not pull down; merely wrap the tubes at this location with 6" Velcro strips; one on each side of the roll cage. Wrap the double-sided Velcro straps around the hook strips to attach the center of the top of the enclosure. See diagram in fig.1. The 26" tab may need to be cut in places to fit the roll cage. Be sure to burn the cut edges of your tab so as not to fray edges.


6. Once the main enclosure and windshield have been fitted to the vehicle, move to the rear and attach the rear window to the enclosure at the zipper across the top, on the outside of the divider screen. Mark the location where the bottom of the rear window meets the divider screen and apply the 43" adhesive hook strip provided across the divider screen. Attach the Velcro sewn in across the bottom of the rear window to the adhesive hook strip across the bottom of the divider screen. Now wrap the roll cage tubes below the air intake vents with a 6" adhesive hook strip on both sides of the frame. Attach the double-sided Velcro straps at the bottom of the enclosure to the hook strips wrapped around both sides of the bottom of the frame.
7. Now zip the side doors onto the enclosure one at a time starting with the front/top main zipper. Next zip down the side of the rear window. There are three double-sided Velcro straps on the inside of the doors that attach to the frame; mark their positions on the frame and wrap the tubes with a 6" adhesive hook strip at each location. Attach the double-sided Velcro strips on the enclosure to the hook strips on the frame. The only remaining adhesive Velcro strips should be the two 8"x1" pieces provided. At the rear of the door panels there are two 8" Velcro tabs sewn into the door panels. Apply adhesive hook strips to the bed of the vehicle at these locations, running vertically. Attach the Velcro tabs on the enclosure to the adhesive hook strips on the bed. See figs. 1 and 3.
8. Mark the locations for the stud snaps on the front fenders, 4 per side. Install using a #2 Phillips screwdriver and do not overtighten. Attach snaps on enclosure to snap studs on front fender. See fig. 3. Congratulations- you have now completed the installation.

#### Cleaning and Storage Recommendations:

1. Before removing the cab for storage, make sure it is clean and dry, to prevent soiling the textile and scratching the clear vinyl side/rear windows. Clean with a soft rag or sponge using a mild liquid detergent soap and warm water solution. Let the cab dry thoroughly before attempting to roll for storage.

2. It is important that the cab be rolled up for storage rather than folding. Folding will cause undesirable creasing of both the cab textile and the clear vinyl side/rear windows. Carefully roll up the cab similar to the way it was when it was packed at the factory. On a large, clean, and flat surface, fold the doors over the rear panel first, then, interleave the top and windshield on top of the doors. Begin rolling the cab into a roll approximately 8" in diameter. Put the rolled cab back into the carton for storage at a normal room temperature. It is best not to expose the cab to either extreme hot or cold temperatures when storing.
3. A special cleaner/conditioner is available from Falcon Ridge that will greatly increase the service life of the cab enclosure. If needed, additional hook and loop sets are available, as well as other spare parts and hardware. Contact Falcon Ridge for information.
4. Transporting or trailering your UTV with the enclosure installed is not generally recommended. It is best to remove the enclosure before transporting your UTV.

**Thank you for your purchase!**

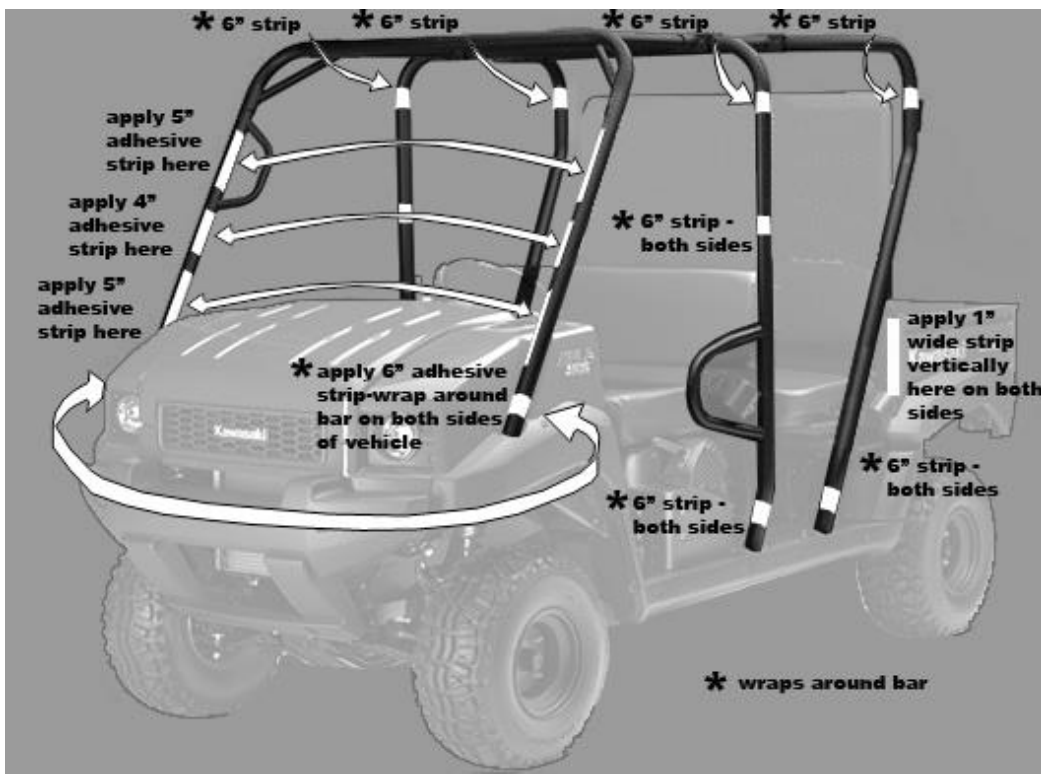

**Fig.1**

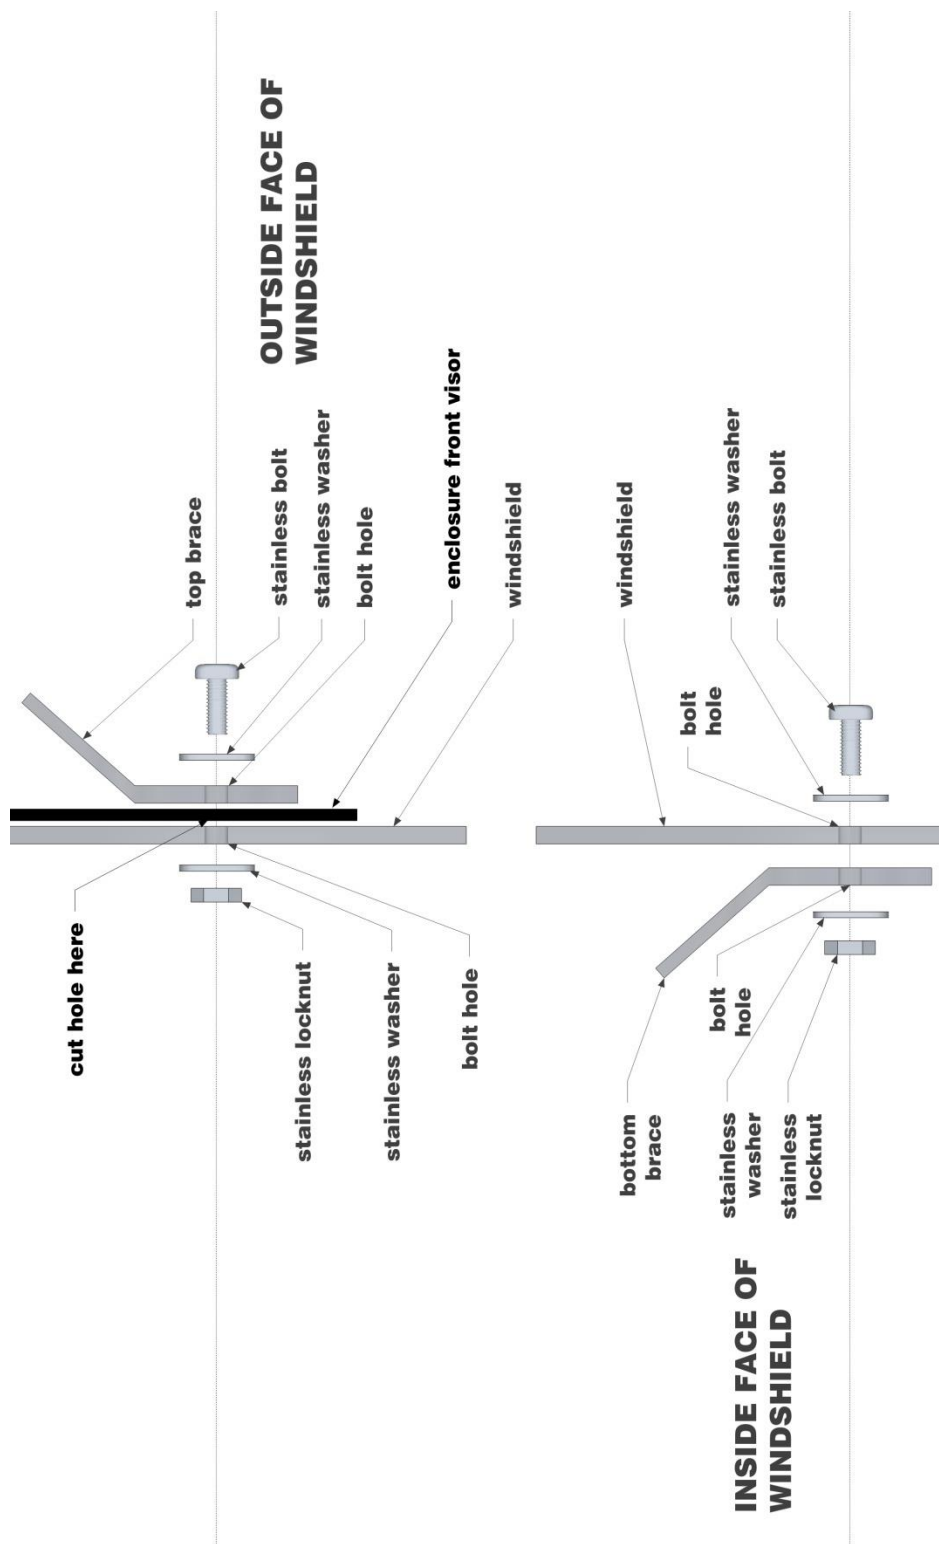


Fig. 2



Fig.3

**Falcon Ridge**  
**2515 Bypass Rd, Flemingsburg, KY 41041**  
**Phone: 606-845-7439 or 606-748-5136**

If for any reason you choose to return this product it must be returned within **30 days from date item is received**. You **MUST** package the product exactly **as it was originally packaged from the factory to get a full refund for the product!**

The vinyl windows should never be folded when packaging in the box or for storage purposes. Lay all the windows on top of each other with the canvas folded in between and the paper (if available) on both sides of the windows.

**All returned products will be inspected upon arrival at the production facility and must be in unused, factory new condition to receive refund - a 20% restocking fee will apply.**

If ordered from Falcon Ridge please call at 606-845-2227 to gain a return authorization number, use our preferred shipping carrier (UPS) to return the item (unless the item is defective, you are responsible for paying the shipping to return the item.) **Any returns submitted to Falcon Ridge without a return authorization number will be charged a 20% restocking fee.** If ordered from one of Falcon Ridge many distributors', you must first call them and see what their return policy is. Once your item reaches our production facility, our customer satisfaction team will inspect your item to ensure unused, factory new condition.

**NOTE: All Lexan windshields must be returned with the original protective film intact and not removed. Do NOT REMOVE if you have any intentions of returning the item. Refund/ replacement on lexan windshields will only be processed on items with original protective film or if the windshield is defective.**

Items must be properly packaged in the original shipping carton to protect them during transit and ensure your returned item arrives back factory fresh, and in new resalable condition (**any returned items that have been used, altered or damaged in any way will not be subject for a refund.**) All contents including instruction manuals, accessories, hardware, Velcro, etc. must be included in your return shipment. Only items in OEM factory new condition will be approved. Once returned items are received, credit will be issued to the original credit card/ payment method used for the purchase. Outbound shipping and return shipping cost will not be refunded. Please allow 4 to 6 weeks for your refund to be processed.

To The Owner of this Product:

Thank you for purchasing one of Falcon Ridges Enclosure &/or Windshields! Below are the terms under which your product is covered under our manufacturer's warranty.

30 Day Warranty which includes and is not limited to replacing the enclosure and/or windshield due to defect of the product. Please refer to the return policy in this case for more information.

1 Year Warranty includes any defect in material or workmanship within this time frame we will gladly correct the problem or replace the enclosure &/or windshield. Upon submitting for the correction or replacement we will need to receive pictures of the defect in material or workmanship along with the receipt from the date of purchase.

Thank you

Falcon Ridge