

2515 Bypass Rd. Flemingsburg, KY 41041 606-845-7439

Instructions for Installation and Care of Kubota RTV X900

Soft Door Rear Window Combo

KU-X900-DRW01

Notice: Do not smoke inside the cab or expose the enclosure to direct flames. Cab is Flammable.


- 1. Be sure to read these instructions thoroughly before opening and installing the Kubota RTV X900 Full Cab with Aero-Vent Poly Windshield. The installation is best done when the temperature is 70 degrees F. or warmer. The temperature affects the adhesive Velcro, if conditions prevent installing in warmer weather it helps to store the adhesive Velcro at room temperature prior to installation.
- 2. Carefully open the carton and remove the enclosure on a large flat surface that is clean and free of dirt.
- 3. Check over the parts included in the carton with the parts list shown below:

Adhesive Velcro Hook Strips:				35 each3"
"	"	"	"	2 each6"
"	"	"	"	4 each8"
"	"	"	"	2 each10"
"	"	"	"	2 each14"
"	"	"	"	2 each17"
"	"	"	"	1 each53"
Cab Enclosure				3 panels

4. Begin by installing the Rear Window. Along the bottom of the rear window is a 53" long Velcro strip. This will attach to the shelf under the expanded metal cage and along the top of the seat back. Take the 53" adhesive Velcro strip and adhere it up under the shelf with the Velcro facing down. Then attach the bottom of the rear window making sure to center it and keep it straight. The photo below shows how it should fit.



5. Now pull the rear window up and attach it to the top bar across the back of the roll cage. The top and sides of the rear window has double-sided Velcro sewn along the edges. At each of these strips you will place a 3" adhesive Velcro strip on the inside of the bar to hold the double-sided Velcro in place. The diagram below shows how to place the Velcro.

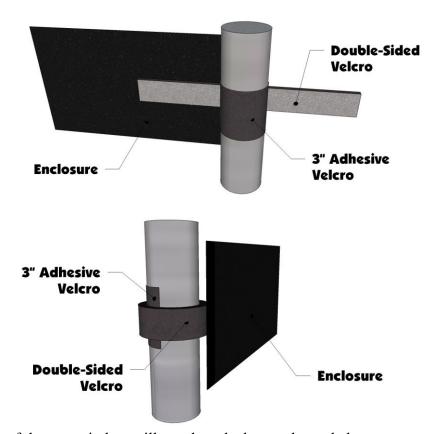

6. The top of the rear window will attach to the bar as shown below:



7. Attach the sides of the rear window in the same fashion as shown in the photo below.



8. Now move on to the door panels. The top and front of the door has the same double-sided strips as the rear window and attaches the same way. See photo below:



9. The back of the door has a cutout with a bungee cord across it. This spot has to go around the metal block sticking out the sides of the vehicle. Placing the door here helps line up the rest of the door so all the Velcro goes where they need to. See photo below:



10. Now work your way around the door attaching the double-sided Velcro under the windshield and at the top rear corner of the door as shown below. The Velcro will go

under the rear window and the adhesive strips will be a bit crowded on the inside of the

bar and its ok if they overlap each other a bit.



11. The next step will be to adhere the 10" and 17" adhesive strips on the exposed roll cage below the cutout with the bungee cord. The picture below show how it should be attached.



12. Next take the 14" adhesive Velcro strips and attach them to the vehicle just under where the roll cage ends down the front. See photo below:



13. Last step is to attach the rear of the door panel to the rear window and to the roll cage just under the rear window. The two top tabs will attach right to the Velcro down the sides of the rear window. The bottom tab will attach directly to the roll cage using an 8" adhesive Velcro strip. See photo Below:



Return Policy

If for any reason you choose to return this product it must be returned within 30 days from date item is received. You MUST package the product exactly as it was originally packaged from the factory to get a full refund for the product!

The vinyl windows should never be folded when packaging in the box or for storage purposes. Lay all the windows on top of each other with the canvas folded in between and the paper (if available) on both sides of the windows.

All returned products will be inspected upon arrival at the production facility and must be in unused, factory new condition to receive refund - a 25% restocking fee will apply.

If ordered from Over Armour Offroad please call at 606-845-7439 to gain a return authorization number, use our preferred shipping carrier (UPS) to return the item (unless the item is defective, you are responsible for paying the shipping to return the item.) Any returns submitted to Over Armour Offroad without a return authorization number will be charged a 20% restocking fee. If ordered from one of Over Armour Offroads many distributors', you must first call them and see what their return policy is. Once your item reaches our production facility, our customer satisfaction team will inspect your item to ensure unused, factory new condition. NOTE: All windshields must be returned with the original protective film intact and not removed. Do NOT REMOVE if you have any intentions of returning the item. Refund/replacement of a windshield will only be processed on items with original protective film or if the windshield is defective.

Items must be properly packaged in the original shipping carton to protect them during transit and ensure your returned item arrives back factory fresh, and in new resalable condition (any returned items that have been used, altered or damaged in any way will not be subject for a refund.) All contents including instruction manuals, accessories, hardware, Velcro, etc. must be included in your return shipment. Only items in OEM factory new condition will be approved. Once returned items are received, credit will be issued to the original credit card/ payment method used for the purchase. Outbound shipping and return shipping cost will not be refunded. Please allow 4 to 6 weeks for your refund to be processed.

Warranty

To The Owner of this Product:

Thank you for purchasing one of Over Armour Offroad Cab Enclosures, Tops &/or Windshields! Below are the terms under which your product is covered under our manufacturer's warranty.

30 Day Warranty which includes and is not limited to replacing the enclosure, tops and/or windshield due to defect of the product. Please refer to the return policy in this case for more information.

1 Year Warranty includes any defect in material or workmanship within this time frame we will gladly correct the problem or replace the enclosure, tops &/or windshield. Upon submitting for the correction or replacement we will need to receive pictures of the defect in material or workmanship along with the receipt from the date of purchase.

Thank you,

Over Armour Offroad

www.overarmouroffroad.com