



**Part Number
#07303**

Assembly & Operations Manual OHGR: Over Head Gun Rack



Assembly information:

- This product has an installation rating of: **Easy**
- Approximate Assembly time: **20 Minutes**


Seizmik makes Windshields, Doors, Tops, Hood Racks, Brush Guards, and other great accessories for utility vehicles & side x sides. Our products are engineered tough for long life and tested under the harshest of conditions.

Always observe the warnings and precautions in this manual when using your Seizmik products. For best results, carefully follow the instructions in this manual and make no modifications.


Seizmik products are designed, developed and manufactured by Vialink Corp. If you have any questions, comments, need assistance, or are missing parts, please call 1-866-838-3366 between 9:00AM and 5:00PM EST. You can email us at support@seizmik.com

***Always transport guns UNLOADED and pointed in a safe direction. Seizmik is not responsible for injury to persons or damage to the weapon due to improper handling.**

Parts List

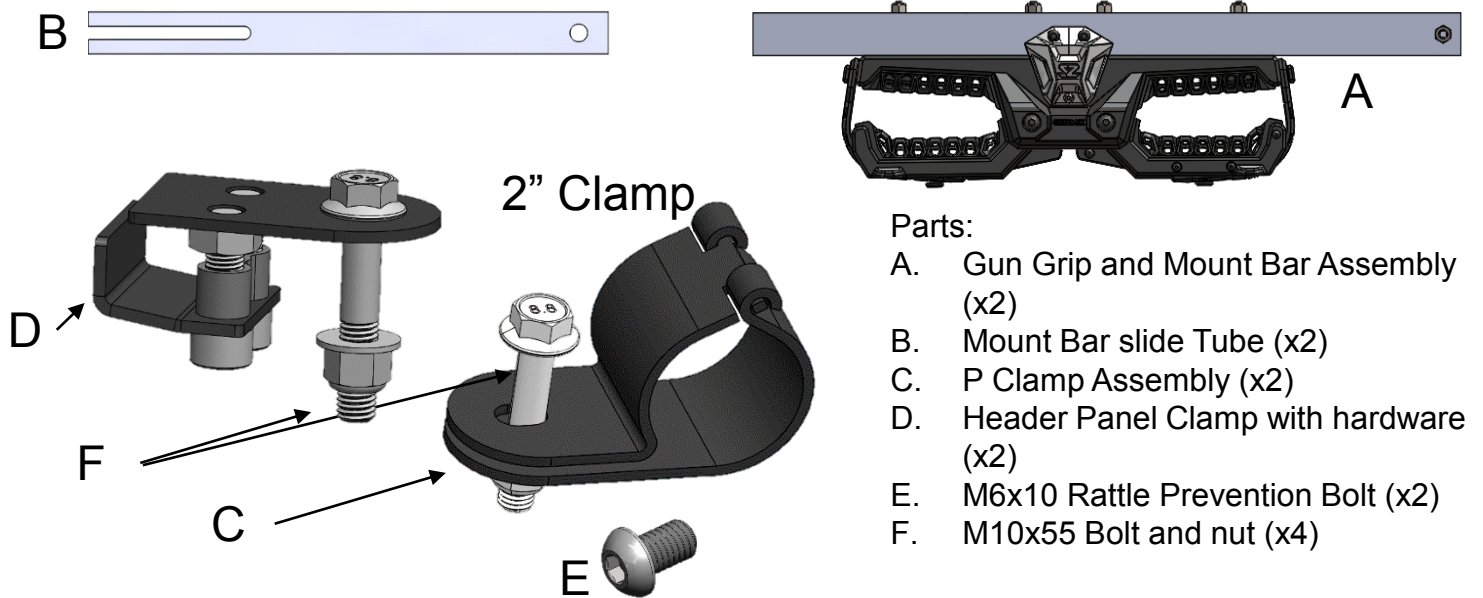


Installation

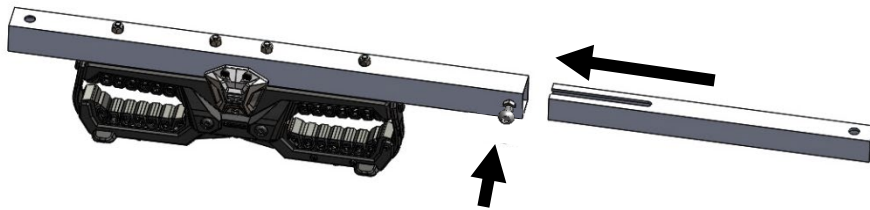


1. Start by inserting the slide tube into the larger tube loosely. Once the tube is inserted, loosely thread the rattle prevention screw into the welded nut on the end of the larger tube.

Rubber Shim Guide


Use 2 Rubber Shims for 1.5", 1.79" Diameter Roll Cage Only

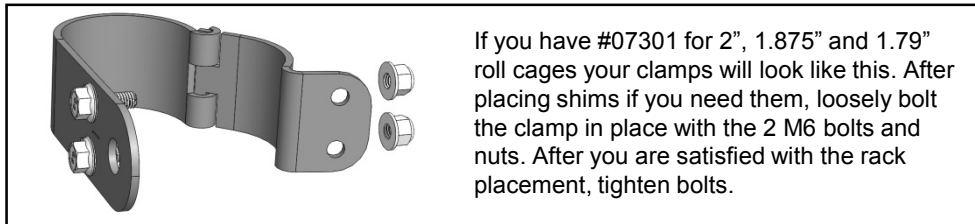


1 Rubber Shim for 1.625", 1.875" Diameter Roll Cage Only

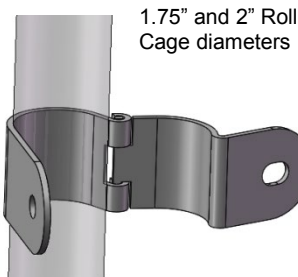

Open clamp and place around roll cage tube. Do not use rubber shims for 1.75" and 2" Roll Cage diameters.

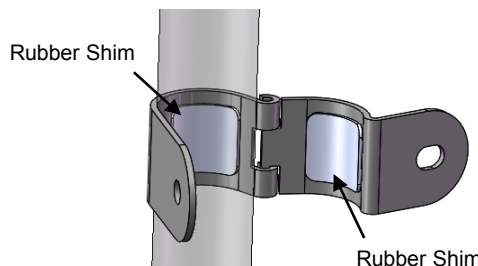

Use a shim on each half to adapt the 1.75" roll cage clamp down to 1.5" and do the same to adapt the 2" clamp down to 1.79" (Honda Pioneer)

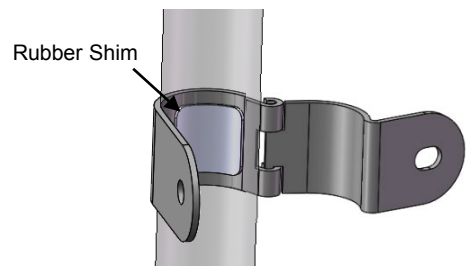


Use 1 shim on the inner half to adapt the 1.75" roll cage clamp down to 1.625" and do the same to adapt the 2" clamp down to 1.875"





2. Place a metal P clamp around the rear upper roll cage tube.



3. Take the gun grip assembly with slider tube inserted (tighten rattle prevention bolt so the slider tube doesn't fall out) and mount to the p clamp using the supplied M10x55 bolt and nut. Keep loose at this time.

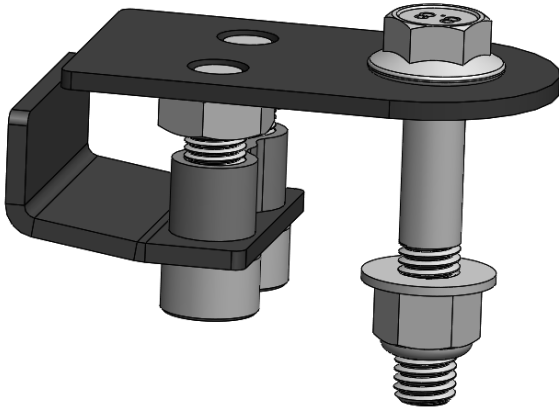

4. Place header panel clamp over the rearward edge of the panel as shown and fasten the slider tube to the clamp using the supplied M10x55 bolt and nut. Snug the x2 M10 socket head bolts on the header panel clamp but keep enough slack so that the assembly can be moved left or right as seen in the next step.

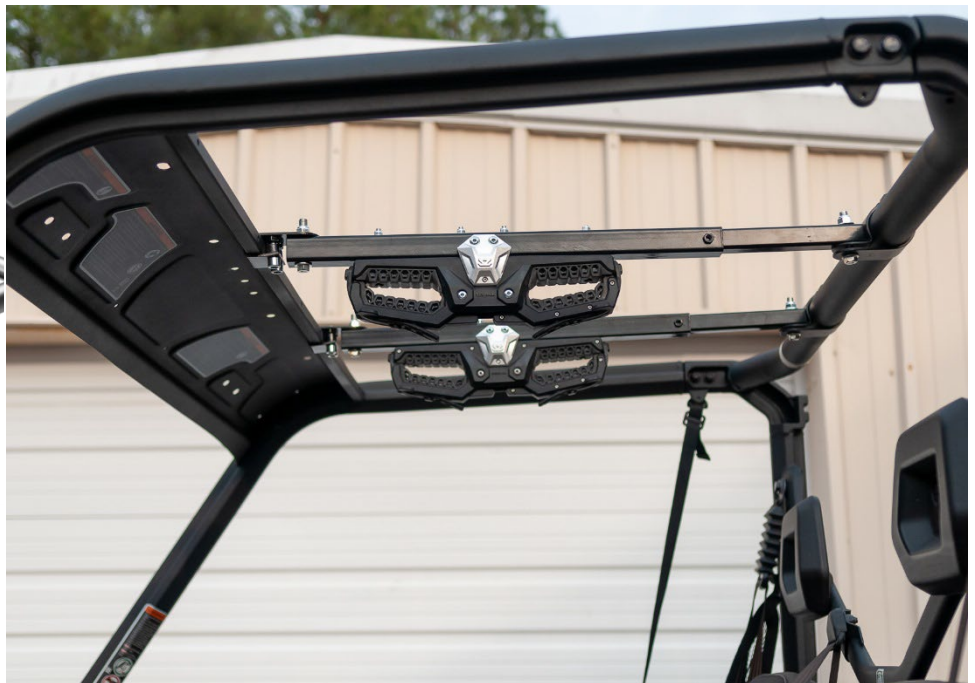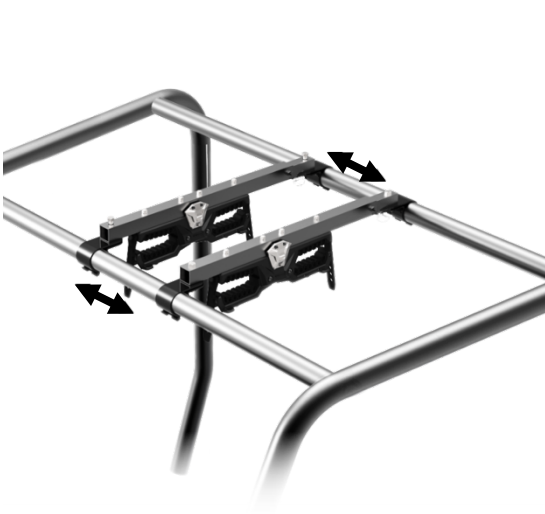

5. Mount the second gun grip assembly just like the first. Adjust the width between the two gun grip assemblies to best fit your guns. After the desired width is found, tighten the M10x55 bolt and nut, as well as the M10 socket head bolts on the header panel clamps to lock the gun grips assemblies in the desired location.



6. Open the jaws by releasing the rubber retention straps. Slide your gun into the jaws.



7. Re-Fasten the rubber retention straps, choose whichever hole provides the desired compression and make sure gun is secure before operating the vehicle.



8. Congratulations you have now completed the installation of your Can Am Defender Over Head Gun Rack!