



TRAILARMOR.COM
839 HWY 2 CORINTH, MS 38834
(662) 233-5700

Installation Instructions

Installation Instructions for Can-Am Defender HD8, HD10, MAX HD8, MAX HD10 iMPact A-Arm Guards TA011ARMIMP-CAD

Warnings and Product Liability Disclaimer

This product is intended to be used as a cosmetic accessory under normal equipment operation and should not be depended upon or used as a safety device. Manufacturer assumes no liability for personal injury or equipment damage as the result of use or installation of this accessory. User assumes all risk. User should carefully read all instructions prior to installation.


For Front Guards



- Remove tire prior to beginning for easier install. Always secure vehicle with safety stands.
- Locate the driver's side iMPact A-Arm guard (CA-D-LF). Locate the supplied plastic spacer strap 9. Insert the plastic spacer strap in between the tubes of the lower a-arm. Hold the a-arm guard into position on the bottom of the a-arm. Align the plastic spacer strap with the two holes in the a-arm guard. Insert two supplied $\frac{1}{4}$ - 20 x 2 $\frac{1}{2}$ " black flat socket cap screw through the a-arm guard into the plastic spacer strap. Secure loosely using two supplied $\frac{1}{4}$ - 20 nylock nuts. See Picture 1.

Do not in any way modify these plastic mounting straps. Do not trim or score any edges. Any modification in any form will result in part failure and breakage!!!

- Locate the lower two pre-drilled holes in the a-arm guard. Insert two supplied $\frac{1}{4}$ "-20 x 2 $\frac{1}{4}$ " black flat socket cap screws from the bottom side of the a-arm guard into the holes of the lower cross brace. Secure loosely using two supplied $\frac{1}{4}$ - 20 nylock nuts. See Picture 2. **Alternate tightening** the nylock nuts on the plastic mounting strap until the strap is secure. The plastic mounting strap will pull into place with the tabs slightly bent with pressure on the tabs. See Picture 3. Repeat procedure on passenger side. See Picture 4 for finished install of fronts guards.

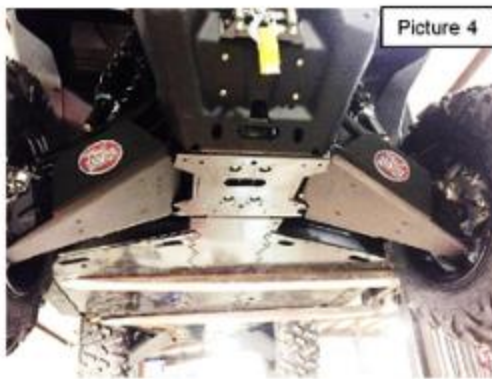



TRAILARMOR.COM
839 HWY 2 CORINTH, MS 38834
(662) 233-5700

Installation Instructions

Installation Instructions for Can-Am Defender HD8, HD10, MAX HD8, MAX HD10

iMPact A-Arm Guards TA011ARMIMP-CAD

For Rear Guards

- A. Locate three supplied $\frac{1}{4}$ -20 u-nuts and the rear passenger side guard (CA-D-RR). Insert three supplied $\frac{1}{4}$ -20 u-nuts onto the factory tabs as shown in Picture 5.
- B. Locate three supplied $\frac{1}{4}$ -20 x 1-1/4" flat head socket cap screws. Holding guard into position, insert one screw into each of the three pre-drilled holes of the guard and into the u-nuts previously installed. See Picture 5A.




- C. **Alternate tightening** the screws until the A-Arm guard is secure. Repeat procedure on driver side. See Picture 6 for finished install.



TRAILARMOR.COM
839 HWY 2 CORINTH, MS 38834
(662) 233-5700

Installation Instructions

Installation Instructions for Can-Am Defender HD8, HD10, MAX HD8, MAX HD10
iImpact A-Arm Guards
TA011ARMIMP-CAD

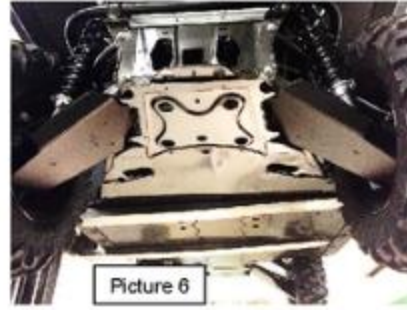

- D. Replace tires, tighten securely and check all lug nuts.