


# CFMOTO SSV ZFORCE 800/ 800 EX/ 550/ 500/ 1000

**Part No.:** 2444.6849.1 Front bumper  
**Brend:** CFMOTO  
**Model:** ZFORCE 800/ 800 EX/ 550/ 500/ 1000  
**Year:** 2013-  
**Material:** Tube 38x1,5 mm



## Content

- |                      |       |
|----------------------|-------|
| 1. Front bumper..... | 1 pc. |
| 2. Bracket.....      | 2 pc. |
| 3. Screw M6x16.....  | 4 pc. |
| 4. Screw M10x20..... | 2 pc. |
| 5. Washer 6.....     | 4 pc. |
| 6. Washer 10.....    | 2 pc. |

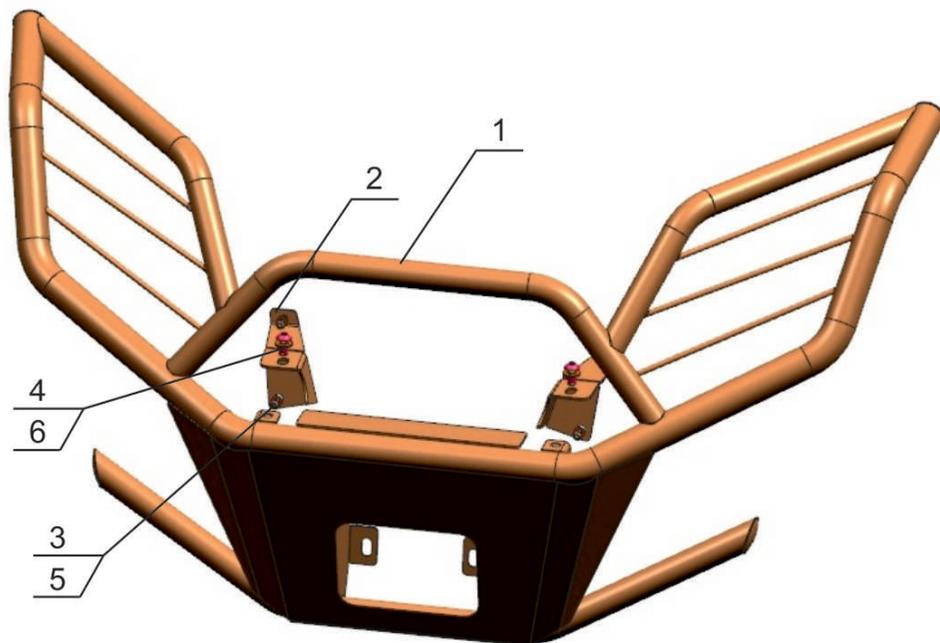

## Installation Instructions

1. Remove rubber pads from original front tube.
2. Install brackets no.2 to the spots of rubber pads, and then fix them using screw M6 no.3 through the washers no.5.
3. Remove the roller fairlead.
4. Mount the bumper on the front part of the vehicle. Fix upper part of the bumper to brackets no.2 using screws no.4 and washers no.6. Fix lower part of the bumper using the original bolts of the roller fairlead (access to the nuts from wheel arch side, opposite the winch as shown on the pictures). Install the roller fairlead over the bumper fitting.
5. Tighten all screws.

**TOOLS REQUIRED**

		
	S-4, S-6	S-13

**SCREW FORCE**

 M6-10 Nm	 M8-30 Nm	 M10-50 Nm
--	--	---